



McIntosh Laboratory, Inc. 2 Chambers Street Binghamton, New York 13903-2699 Phone: 607-723-3512 [www.mcintoshlabs.com](http://www.mcintoshlabs.com)

HR070 Series  
Remote Control  
Programming Guide






## Introduction

The McIntosh HR070 Series Remote Controls (HR070, HR071, HR072 and HR073) supplied with McIntosh Preamplifiers, Integrated Amplifiers, A/V Control Centers, and Source Components not only control a McIntosh Component System, but also have the ability of controlling non McIntosh Components in your system. Refer to figures 1 through 4

The HR70 Series Remote Controls have stored in permanent memory the necessary information to send the correct commands to the component to be controlled. By entering a five digit numeric code the commands for controlling the component is activated.

In the event the Remote Control doesn't have the code to control a particular component, the Remote Control has the ability to learn and store the IR Signals sent out by the Remote Control originally supplied with the component.

## Battery Information

Use only fresh batteries of the required size and recommended type. When the battery voltage is low, the  Push-button will blink 5 times after another Push-button on the Remote Control is pressed. Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

If the Remote Control will not be used for an extended period, remove the batteries. They can leak chemicals and destroy the Remote Control.



When discarding the Remote Control, comply with local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.



For additional information please visit the McIntosh Web Site at [www.mcintoshlabs.com](http://www.mcintoshlabs.com).

## Installing Batteries

1. Open the battery compartment cover (located on the back of the remote).
2. Place the AA batteries in the compartment and match the + and - polarity symbols inside.
3. Replace the cover.

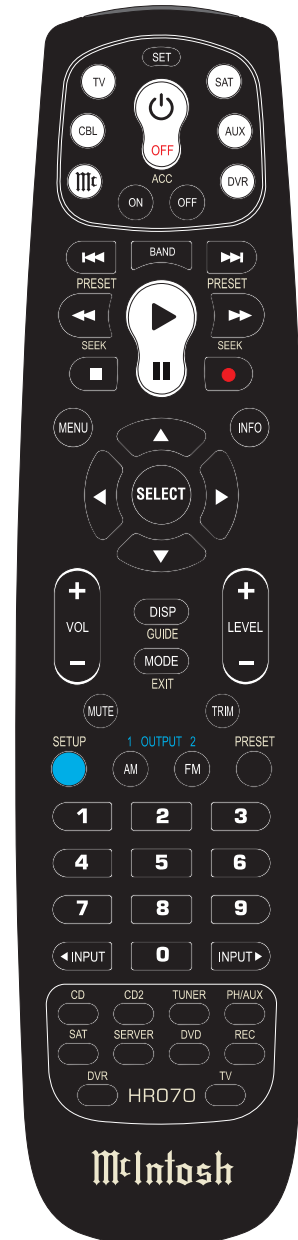 


Figure 1

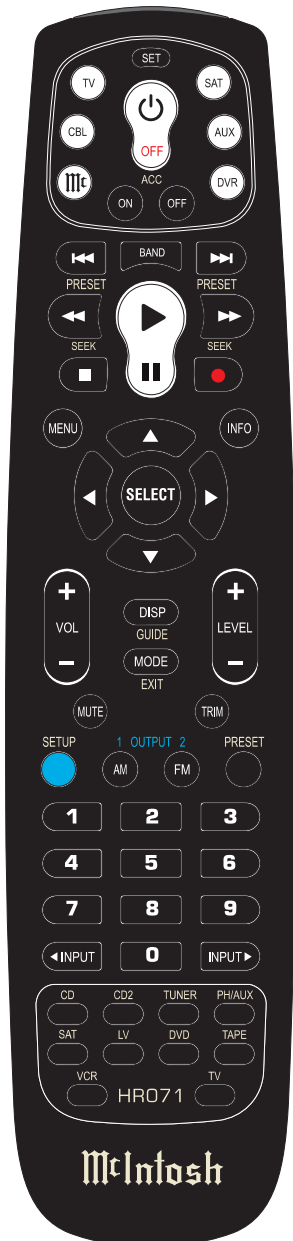 


Figure 2

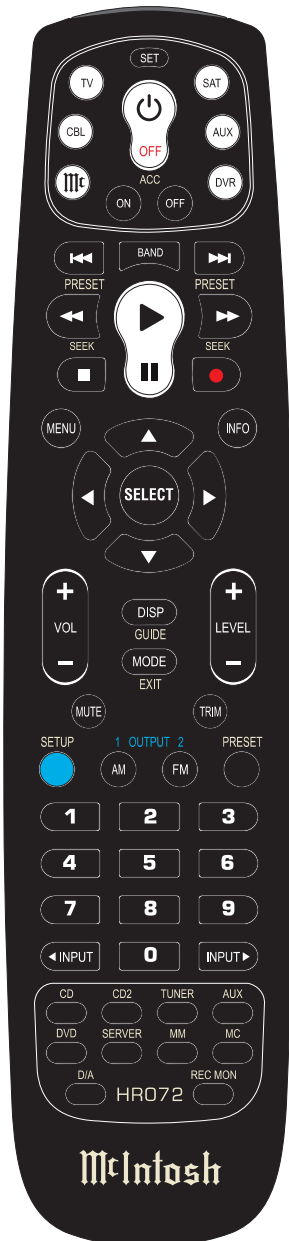 


Figure 3

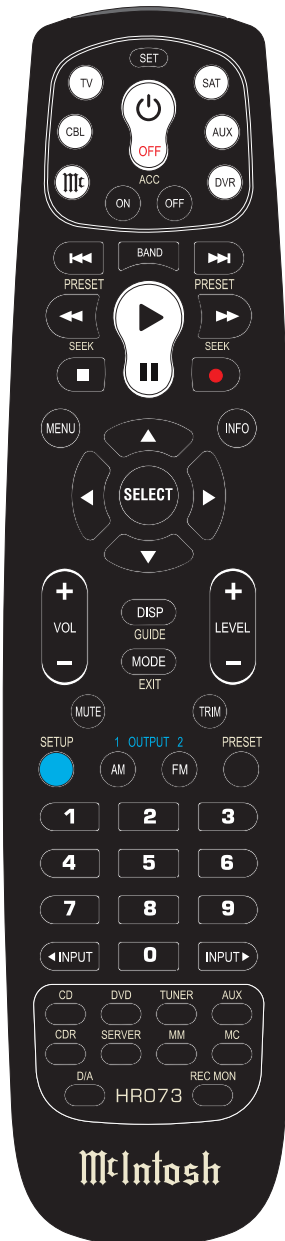 


Figure 4

## Table of Contents

Introduction.....	2
Battery Information .....	5
Installing Batteries.....	6
Installation .....	7



## Programming a Component

Program this Remote Control by first find the codes for the components you want to program (starting on page XX) and then follow the steps below:

1. Turn on the component (in this example, the TV).
2. Press TV Push-button on the Remote Control to be programmed. Refer to figure 5.
3. Press and hold SET Push-button until the Push-button illumination blinks twice, then release.
4. Enter the first five-digit code for the component (TV) and brand that you wish to program. The Push-button blinks once as each digit is entered. If the code is valid, the Push-button blinks twice.  
*Note: If the Push-button does not blink twice, repeat steps 2 to 4 and try entering the code again.*
5. Aim the McIntosh Remote Control at the component and press Power Off. The TV should turn Off. If it does not, repeat steps 3–5, trying each code for your brand until you find one that works. If you cannot find a working TV codes refer to “Searching Codes” on this page.

*Note: There might be more than one Program Code Number capable of switching power Off to the TV. Choose the Code Number with the greatest number of desired active commands for the TV to be controlled.*

6. Repeat steps 1 to 5 for the other components you want to control. For future reference, write down each working component code below:

HR Series Remote Control Programming		
Assigned Push-button	Component	Program Code
TV		
CBL		
SAT		
AUX		
DVR		

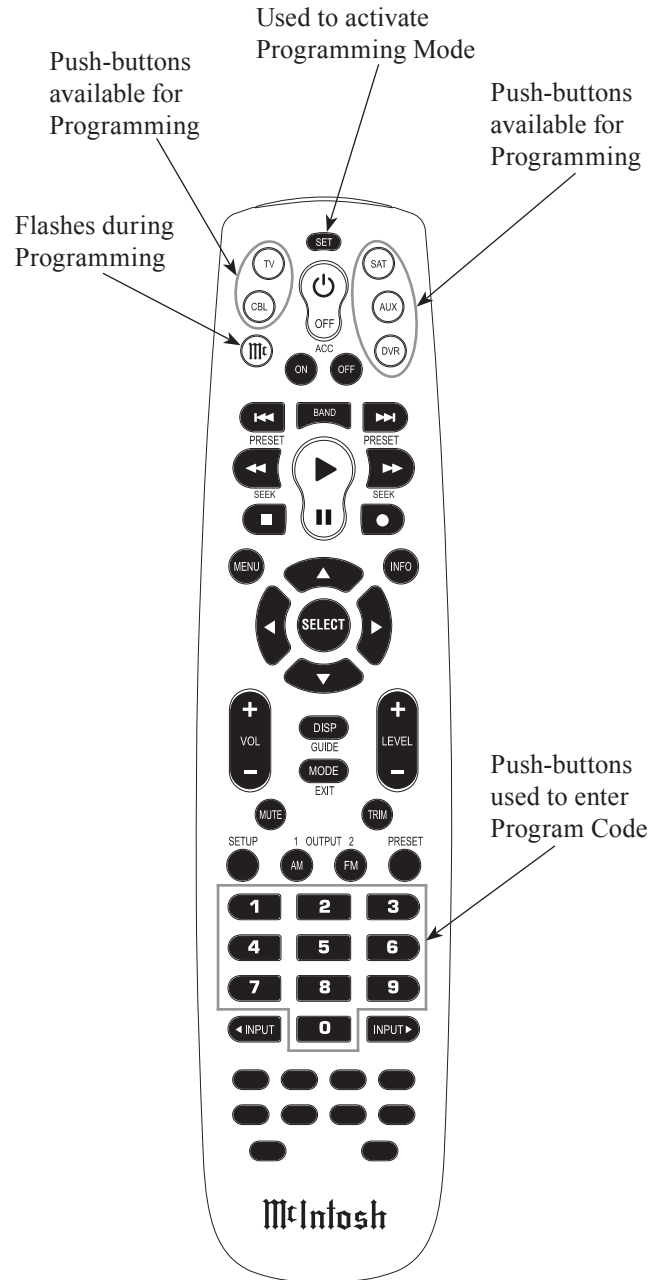 


Figure 5

## Searching for Code

If your component (TV in the Programming a Component example) does not respond to the Remote Control after trying all codes listed for your (TV) brand, or if your TV brand is not listed, try searching for your code:

1. Switch On the TV you wish to control.
2. Press the TV Push-button on the Remote Control once.
3. Press and hold SET Push-button until the Push-button illumination blinks twice, then release.
4. Enter 9 9 1, then the component group number (see below). The Push-button blinks twice.

Code Number	Component Group
0	Cable (Cable Converter, Video Accessories, Satellite Receivers)
1	TV
2	VCR (VCRs, DVD Players)
3	Audio (Audio Amplifiers, Audio Amp /Tuners, CD Players)

5. Aim the Remote Control at the TV and press Power Off. The Remote Control sends IR Codes from its library to the selected TV, starting with the most popular code first. If the component responds, go to step 7.
6. If the component does not respond, press LEVEL+ Push-button and the Remote Control will test the next code for that TV type. Continue to press LEVEL+ Push-button until the TV switches Off.  
*Note: Press LEVEL- Push Button to try the previous code.*
7. Now that you have found the correct code, press SET to save the code that worked for the TV. The Push-button will blink twice to indicate the code has been saved. To search for other component codes, repeat steps 1 to 5.

---

## Checking the Codes

---

### CHECKING THE CODES

If you have set up the remote using the procedure in “Searching for Your Code”, you may need to find out which five-digit code is operating your equipment. For example, to find out which code is assigned to your TV:

1. Press TV once.
2. Press and hold SETUP until the red LED blinks twice, then release.
3. Enter 9 9 0. The LED blinks twice.
4. To view the code for the first digit, press 1. Count the LED blinks (for example, three blinks = 3), and write down the number in the appropriate code listing at the top of this column.

NOTE: If a code digit is 0, the LED does not blink.

5. Repeat step 4 for the four remaining digits, using 2 for the second digit, 3 for the third digit, 4 for the fourth digit, and 5 for the fifth digit.
6. To check for other device codes, repeat steps 1—5, substituting the device key the desired mode you would like to check.

### USING LEARNING

This universal remote control includes a Learning feature (some models may not include Learning) so you can add functions that are unique to your home entertainment components (e.g., VCR Tracking Up or Down). However, there are some considerations.

#### Learning Precautions

- Your original remote controls must be in working order for learning to work properly.
- Learned keys are mode-specific, so each one can store a unique function for each mode.
- Do not use the following keys for learning: Device Keys, SETUP, or Record (•).
- Learning capacity is approximately 42 to 75 keys, depending on the code being learned.
- Certain device functions are not learnable including multi-frequency types, some high frequency ones, and other unusual formats.
- For optimum learning, avoid high levels of ambient light such as natural sunlight or energy-efficient fluorescent lights.

NOTE: Please have your original remote controls handy before programming learning.

---

## Programming a Learned Push-button

---

### Programming a Learned Key

NOTE: If more than 10 seconds pass between key presses, the remote exits programming.

1. Place the Potenza head-to-head (about 2” apart) from your original remote control. Also locate the key (on your original remote control) that you want the Potenza to learn. Press the mode key you wish to learn keys on.

2. Press and hold SETUP until the LED blinks twice, then release.

3. Enter 9 7 5. The LED blinks twice.

NOTE: If the LED displays one long flash instead, either your batteries are low, or the Potenza has a memory fault. In either case, the remote cannot learn a new key.

4. Press the key on the remote you wish to learn onto. The feedback LED will blink rapidly for three seconds, suggesting the remote is ready to learn.

5. On the original remote, press and hold the key to be learned. Continue holding the key on the original remote until the Potenza’s LED blinks twice.

NOTE: If the LED displays one long blink, a learning error has occurred. Try repeating this step again until a successful capture occurs. If the function

is still not captured, press and hold SETUP to exit programming and review the “Learning Precautions” above. If needed, also see “Troubleshooting”

below. After review, start programming again at step 1.

6. Repeat steps 4 through 5 for another key you would like to learn onto.



Once you have completed learning all keys, press and hold SETUP until the LED blinks twice to save all data learned.

#### Deleting a Single Learning Key

This process returns the key to its original programming for the mode you select. You can also delete learned programming by teaching a different function to the key (see “Programming a Learned Key”).

NOTE: If more than 10 seconds pass between key presses, the remote exits programming.

1. Press the mode key that you wish to remove the learned key from.
2. Press and hold SETUP until the LED blinks twice, then release.
3. Enter 9 7 6. The LED blinks twice.
4. Press the key containing the learned function to be deleted twice. The

LED blinks twice and exits from programming.

#### Deleting All Learned Keys in a Specific Mode

NOTE: If more than 10 seconds pass between key presses, the remote exits programming.

1. Press and hold SETUP until the LED blinks twice, then release.
2. Press 9 7 6. The LED blinks twice.
3. Press a mode key twice (i.e., TV, VCR/DVD, CBL/ SAT, etc.) to clear all the learned keys for that mode. The LED blinks twice and exits from programming.

## Volume Lock

### CHANGING VOLUME LOCK

The Potenza universal remote control comes preset to allow independent volume control of each selected device (Global Volume Unlock). However, you may change the Volume Lock setting to Global Volume Lock so that one device’s volume will control volume in all other modes. After that, you can perform Individual Volume Unlock on a selected device to set its volume control for independent operation or Global Volume Unlock to remove all volume locking.

Locking Volume Control to One Mode (Global Volume Lock)

1. Press and hold SETUP until the red LED blinks twice, then release.
2. Enter 9 9 3, the LED blinks twice.
3. Press the mode key for the device you want to control (for example, TV).
4. The LED blinks twice. Now when you press VOL+, VOL-, or Mute, the selected device (for example, TV) controls the volume regardless of the current mode.

Unlocking All Volume Control (Restoring Global Unlock)

1. Press and hold SETUP until the red LED blinks twice, then release.
2. Enter 9 9 3, the LED blinks twice.
3. Press VOL+. The LED blinks four times. Volume is independently controlled for all programmed components.

Unlocking a Single Device’s Volume Control

1. Press a device key (TV, VCR/DVD, CBL/ SAT, etc.).
2. Press and hold SETUP until the red LED blinks twice, then release.
3. Enter 9 9 3. The LED blinks twice.
4. and then press VOL-. The LED blinks four times. Volume is independently controlled for the selected components.

<b>Amplifier</b>			
Adcom.....	30577, 31100	Active.....	00237
Bose.....	30674	Americast.....	00899
Carver.....	30892	Amino.....	01822
Curtis Mathes.....	30300	Archer.....	00237
Durabrand.....	31561	BCC.....	00276
Elan.....	30647	Bell & Howell.....	00014
GE.....	30078	Bell South.....	00899
Harman/Kardon.....	30892	British Telecom.....	00003
JVC.....	30331	Century.....	00008
Left Coast.....	30892	Citation.....	00017
Lenoxx.....	31561	Clearmaster.....	00883
Marantz.....	30892	ClearMax.....	00883
McIntosh.....	30251	Cool Box.....	00883
Modulaire.....	30395	Coolmax.....	00883
NEC.....	30264	Digeo.....	01187
Optimus.....	30395, 30013, 30300, 30823	Digi.....	00637
Parasound.....	30246	Director.....	00476
Philips.....	30892	Dumont.....	00637
Pioneer.....	30013, 30300, 30823	DX Antenna.....	01500
Polk Audio.....	30892	Emerson.....	00014
RadioShack.....	30395	Fosgate.....	00276
RCA.....	30013, 30300, 30823	Fujitsu.....	01497
Realistic.....	30395, 30013	GE.....	00144
Shure.....	30264	General Instrument.....	00476, 00810, 00276
Sony.....	30689, 30815	.....	00003, 00012, 00014
Soundesign.....	30078	Gibraltar.....	00003
Victor.....	30331	GMI.....	00883
Wards.....	30078, 30013	GoldStar.....	00144
Yamaha.....	30354, 30133	Hamlin.....	00009, 00273
		Hitachi.....	0003, 00008, 00009
		Insight.....	00476, 00810
<b>Cable Set Top Box</b>		Jebsee.....	00014
A-Mark.....	00008, 00144	Jerrold.....	00476, 00810, 00276, 00003, 00012, 00014
ABC.....	00237, 00003, 00008, 00014, 00017	Maspro.....	01510
Accuphase.....	00003, 00014, 00017	Memorex.....	00000
Acorn.....	00237	Mitsubishi.....	00003
Action.....	00237	Motorola.....	01376, 00476, 00810, 00276
			01187, 01254, 00014, 01106
		Multitech.....	00883
		Myrio.....	01822
		NEC.....	01496
		Nova Vision.....	00008
		Novaplex.....	00008, 00017
		NSC.....	00012, 00637
		Oak.....	00017
		Pace.....	01877, 00877, 00237, 00008
		Panasonic.....	00000, 00008, 00144, 00107, 01488
		Panther.....	00637
		Paragon.....	00000, 00008, 00525
		Penney.....	0000, 00637
		Philips.....	01305, 00317
		Pioneer.....	01877, 00877, 00144, 00533, 01500
		Prism.....	00012
		Pulsar.....	00000
		Quasar.....	00000
		RadioShack.....	00883
		RCA.....	01256
		Regal.....	00276, 00279, 00273
		Runco.....	00000
		Samsung.....	00003, 00144
		Scientific Atlanta.....	01877, 00877, 00477, 00237
		.....	00003, 00000, 00008, 00012
		.....	00017, 01510
		Sony.....	01006, 01460
		Sprucer.....	00144
		Starcom.....	00003, 00014
		Stargate.....	00014
		Storm.....	00637
		Sumitomo.....	01500
		Supercable.....	00276
		Supermax.....	00883
		Thomson.....	01256
		Tocom.....	00012
		Torx.....	00003

**Cable Set Top Box, con't**

Toshiba.....	00000, 01509
Tristar.....	00883
United Cable.....	00276, 00003, 00014
US Electronics.....	00276, 00003, 00008, 00017
V2.....	00883
Videoway.....	00000
Viewmaster.....	00883
Vision.....	00883
Vortex View.....	00883
Zenith.....	00000, 00525, 00899, 00017

**Cable/PVR Combination**

Americast.....	00899
Amino.....	01822
Digeo.....	01187
General Instrument.....	00810
Jerrold.....	00810
Motorola.....	01376, 00810, 01187, 01106
Myrio.....	01822
Pace.....	01877, 00237
Pioneer.....	01877, 00877
RCA.....	01256
Scientific Atlanta.....	01877, 00877
Sony.....	01006
Supercable.....	00276
Thomson.....	01256
Zenith.....	00899

**CD Player**

Acoustic Research.....	30420
Admiral.....	30305
Aiwa.....	30157
Arcam.....	30157
Audio Research.....	30157
Burmester.....	30420
Cairn.....	30157

California Audio Labs.....	30029, 30303
Cambridge Soundworks.....	30157
Carver.....	30157, 30179
Curtis Mathes.....	30032
Denon.....	30626, 30003, 30034
DKK.....	30000
DMX Electronics.....	30157
Emerson.....	30305
Fisher.....	30000, 30179
Funai.....	30305
Garrard.....	30393, 30420
Genexxa.....	30032, 30305
Grundig.....	30157
Hafler.....	30173
Harman/Kardon.....	30100, 30157, 30173
Hitachi.....	30032
Inkel.....	30157, 30180
Integra.....	30101
Jerrold.....	30003
JVC.....	30032, 30072
Kenwood.....	30626, 30000, 30029, 30028, 30037, 30190
KLH.....	31318, 31372, 31373, 31711
Krell.....	30157
Linn.....	30157
LXI.....	30179, 30305
Magnavox.....	30157, 30038, 30274, 30305
Marantz.....	30626, 30029, 30157, 30038, 30180, 30435
Matsui.....	30157
McIntosh.....	30256, 30290, 30660
MCS.....	30029
Memorex.....	30000, 30032, 30179, 30420, 30468
Micromega.....	30157
Miro.....	30000
Mission.....	30157
Modulaire.....	30000, 30032, 30087, 30179
.....	30180, 30420, 30468
MTC.....	30420

NSM.....	30157
Onkyo.....	31327, 30101
Optimus.....	30000, 30032, 30037, 30087
.....	30179, 30305, 30393, 30420, 30468
Panasonic.....	30029, 30303, 30388, 30752
Parasound.....	30420
Penney.....	30029
Philips.....	30626, 30157, 30274
Pioneer.....	31062, 30032, 31087, 30305, 30468
Polk Audio.....	30157
Proceed.....	30420
Proton.....	30157
QED.....	30157
Quad.....	30157
Quasar.....	30029
RadioShack.....	30000, 30032, 30179, 30180, 30420, 30468
RCA.....	31062, 30032, 30053, 30179, 30305, 30420, 30468
Realistic.....	30000, 30032, 30087, 30179
.....	30180, 30305, 30420, 30468
Revox.....	30157
Roksan.....	30435
Rotel.....	30157, 30420
SAE.....	30157
Sansui.....	30000, 30157, 30305
Sanyo.....	30000, 30087, 30179
Scott.....	30305
Sears.....	30179, 30305
Sharp.....	30037, 30034, 30180
Sherwood.....	30180
Sonic Frontiers.....	30157
Sony.....	30490, 30000, 30100, 31364, 30185
Sugden.....	30157
Sylvania.....	30157
Symphonic.....	30180, 30305
TAG McLaren.....	30157
Tandy.....	30032
Tascam.....	30393, 30420



Teac	30490, 30180, 30378, 30393, 30420
Technics	30029, 30303
Techwood	30303
Thule Audio	30157
Victor	30072
Wards	30032, 30157, 30053, 30087, 30179
Yamaha	30490, 30036, 31292
Yorx	30000

**Home Automation**

Accutec	31215
Amana	31716
Bionaire	30846, 31215
Frigidaire	31333
GE	30240
GoldStar	31537
Holmes	31215
Kenmore	31537
Lasko	30846
LG	31537
Lightolier	30184
Lutron	30597, 30318, 31239, 31597
Marmitek	30167
One For All	30167
PCS	30184
RadioShack	30240
Royal Sovereign	31651
Security System	30167
Sharper Image	30846
SmartLinc	30184
Universal	30167
Universal X10	30167
Whirlpool	31332
Windmere	31215
X10	30167

**Audio - Accessory**

Accurian	31106
----------	-------

Altec Lansing	31056, 31485
Apple	31115, 31644
Cambridge Soundworks	31530
Creative	30872
D-Link	31522
Imerge	31491
Integra	31789
iPort	31917
Marantz	31491
Motorola	31464
NaviPod	31644
Netgear	31785
Omnifi	31605
Onkyo	31789
Roku	31828
Russound	32019
Slim Devices	31844
Sonance	31917
SSI	31522
Yamaha	31809, 31810

**Video - Accessory**

ABS	01272
Accurian	01653
Alienware	01272
Allegro	00160
Archer	00160
Bantor	00160
Centronic	00160
CyberPower	01272
D-Link	01554, 01731
Epson	01563
Gateway	01272
GC Electronics	00160
Hauppauge	01757
Hewlett Packard	01272, 01267
Howard Computers	01272
HP	01272, 01267

Hush	01272
iBUYPOWER	01272
Jebsee	00160
JVC	01384
Keyspan	01344
Leadtek	01614
LG	01415
Linksys	01272, 01365
Macro Image Technology	01383
Media Center PC	01272
Microsoft	01272
Mind	01272
Motorola	01363
MyHD	01383
Niveus Media	01272
Northgate	01272
Panasonic	01120
Pinnacle Systems	01268
Pioneer	01010
Princeton	00113, 00295
RadioShack	00160
Ricavision	01272
Roku	01486
Samsung	01190, 01490
Sensory Science	01126
Sharp	01010
Sony	01272, 01324, 01364
Stack 9	01272
Sylvania	01563
Systemax	01272
Tagar Systems	01272
Toshiba	01272
Touch	01272
Verator	00113
Viewsonic	01272, 01329
Vizio	01126
Voodoo	01272
ZT Group	01272



## Audio Receiver

ADC.....	30531
Adcom.....	30616
Aiwa.....	31405, 30189, 30121, 31388, 31641
Akai.....	30244, 31512
Alco.....	31390
AMC.....	31077
Amphion Media Works.....	31563, 31615
AMW.....	31563, 31615
Anam.....	31609, 31074
Apex Digital.....	31257, 31430, 31774
Arcam.....	31189
Audiotronic.....	31189
Audiovox.....	31390, 31627
B & K.....	30701, 30702, 30820, 30840
BK.....	30702
Bose.....	31229, 30639, 31253, 31841, 31933
Brix.....	31602
Cairn.....	30189
Cambridge Soundworks.....	31370
Capetronic.....	30531
Carver.....	31189, 30189, 30121, 31289
Classic.....	31352
Coby.....	31389
Criterion.....	31420
Curtis Mathes.....	30014
Daewoo.....	31250
Delphi.....	31414
Denon.....	31360, 30121, 30771, 31142, 31306
Emerson.....	30531
Fisher.....	31801
Garrard.....	30463
Gateway.....	31517
Go Video.....	31532
Grundig.....	30189
Harman/Kardon.....	30110, 30189, 30891
.....	31289, 31304, 31306
Hitachi.....	31273, 31801

Initial.....	31426
Inkel.....	30491
Insignia.....	31030
Integra.....	30135, 30842, 31298, 31320
JBL.....	30110, 31306
JVC.....	31058, 30074, 31374, 31495, 31811
Kawasaki.....	31390
Kenwood.....	31313, 31570, 31569, 30186
KLH.....	31390, 31412, 31428
Koss.....	31366, 31497
Lasonic.....	31798
Lenoxx.....	31437
Lexicon.....	31076
LG.....	31293
Linn.....	30189
Liquid Video31497	
Magnavox.....	31189, 31269, 30189, 30391
.....	30531, 31266, 31514
Marantz.....	31189, 31269, 30189, 30891, 31289
McIntosh.....	31289
Micromega.....	31189, 30189
Mitsubishi.....	31393
Myryad.....	31189
Nakamichi.....	31313, 30097
New Castle.....	30502
Norcent.....	31389
Nova.....	31389
Onkyo.....	30135, 30380, 30842, 31298, 31320, 31531
Optimus.....	31023, 30074, 30014, 30121
.....	30186, 30502, 30531, 30670, 31074
Oritron.....	31366, 31497
Outlaw.....	30391
Panasonic.....	31308, 31518, 30309, 30367, 31288
.....	31316, 31548, 31633, 31763, 31764
Philips.....	31189, 31269, 30189, 30391, 30891, 31266
Pioneer.....	31023, 30014, 30150, 30244, 30531, 30630,
.....	31384
Polaroid.....	31508

Polk Audio.....	30189, 31289, 31414
Proscan.....	31254
RadioShack.....	31609
RCA.....	31023, 31609, 31254, 30531, 31074, 31390, 31511
Realistic.....	31609, 30121, 30186
Regent.....	31437
Revox.....	30189
Rio.....	31869
Saba.....	31519
Samsung.....	31295, 31304, 31500
Sansui.....	31189, 30189, 31764
Sanyo.....	31251, 31469, 31801
Sharp.....	30186, 30771, 31286
Sharper Image.....	31556
Sherwood ...	30491, 30502, 31077, 31423, 31517, 31653
Shinsonic.....	31426
Sirius.....	31602, 31627, 31811, 31987
Sonic Blue.....	31532, 31869
Sony.....	31058, 31441, 31258, 31759, 31622, 30168, 30474,
.....	31406,
.....	31558, 31658, 31758, 31858
Soundesign.....	30670
Stereophonics.....	31023
Sunfire.....	31313
Teac.....	30463, 31074, 31390, 31528
Technics.....	31308, 31518, 30309, 31384, 31633
Thorens.....	31189
Toshiba.....	30135, 30842, 31788
Venturer.....	31390
Victor.....	30074
Waitec.....	31352
Wards.....	30189, 30014
XM.....	31406, 31414
Yamaha.....	31023, 30176, 30186, 31176
.....	31276, 31331, 31375, 31476
Zenith.....	30857, 31293

**Satellite Set Top Box**

Aiwa.....	01514
AlphaStar.....	00772
Bell ExpressVu.....	00775
Chaparral.....	00216
Coolsat.....	01806
Crossdigital.....	01109
DirecTV.....	01377, 00392, 00566, 00639, 01639 ..... 01142, 00247, 00749, 01749, 00724 ..... 00819, 01856, 01076, 01108, 00099 ..... 01109, 01392, 01414, 01442, 01443 ..... 01444, 01609, 01640
Dish Network System.....	01505, 01005, 00775 ..... 01170, 01775
Dishpro.....	01505, 01005, 00775, 01775
DX Antenna.....	01530
Echostar.....	01505, 01005, 00775, 01170, 01775
Expressvu.....	00775, 01775
Fortec Star.....	01821
Funai.....	01377
GE.....	00392, 00566
General Instrument.....	00869
GOI.....	00775, 01775
Hisense.....	01535
Hitachi.....	00749, 00819, 01518
Houston.....	00775
HTS.....	00775, 01775
Hughes Network Systems.....	01142, 00749, 01749 ..... 01442, 01443, 01444
Humax.....	01790
iLo.....	01535
Innova.....	00099
Jerrold.....	00869
JVC.....	00775, 01170, 01507, 01775
LG.....	01226, 01414
Magnavox.....	00724, 00722
Maspro.....	01530
McIntosh.....	00869

Memorex.....	00724
Mitsubishi.....	00749
Motorola.....	00869
NEC.....	01519
Netsat.....	00099
Next Level.....	00869
Optimus.....	00724
Panasonic.....	00247, 00701, 01508
Pansat.....	01807
Paysat.....	00724
Philips.....	01142, 00749, 01749, 00775, 00724 ..... 00819, 01076, 00722, 00099, 01442
Pioneer.....	01142, 01442
Primestar.....	00869
Proscan.....	00392, 00566
Proton.....	01535
RadioShack.....	00566, 00775, 00869
RCA.....	00392, 00566, 01142, 00775 ..... 00855, 00143, 01392, 01442
Samsung.....	01377, 01142, 01276, 01108, 01109, 01442, 01609
Sharp.....	01489
SKY.....	00099
Sony.....	00639, 01639, 01524, 01640
Star Choice.....	00869
Star Trak.....	00772, 00869
Thomson.....	00392, 00566
Tivo.....	01142, 01442, 01443, 01444
Toshiba.....	00749, 01749, 00790, 00819 ..... 01285, 01501, 01530
UltimateTV.....	01392, 01640
Ultrasat.....	01806
Uniden.....	00724, 00722
US Digital.....	01535
USDTV.....	01535
Voom.....	00869
Zenith.....	01856

**DBS/PVR Combination**

DirecTV.....	01377, 00392, 00639, 01142 ..... 01076, 00099, 01392, 01442 ..... 01443, 01444, 01640
Dish Network System.....	01505, 00775
Dishpro.....	01505, 00775
Echostar.....	01505, 00775, 01170
Expressvu.....	00775
Hughes Network Systems.....	01142, 01442, 01443, 01444
JVC.....	01170
Motorola.....	00869
Philips.....	01142, 01442
Proscan.....	00392
RCA.....	01392
Samsung.....	01442
Sharp.....	01489
Sony.....	00639, 01640
Star Choice.....	00869

**Television**

A-Mark.....	10047, 10054, 10165
Accuscan.....	10047, 10018, 10135
Action.....	10030, 10185
Admiral.....	10047, 10054, 10017, 10051, 10093 ..... 10463, 10180, 10018, 10165
Advantz.....	10282
Advent.....	10761, 10783, 10815, 10817, 10842, 11933
Adventuri.....	10000
Agna.....	10150
Aiko.....	10092
Akai.....	10060, 10812, 10702, 10030, 10145 ..... 10151, 10672, 11903, 11935
Albatron.....	10700, 10843
Alfide.....	10672
Alleron.....	10030
Ambassador.....	10150, 10177
America Action.....	10180
American High.....	10000, 10060



## Television, con't

Ampro ..... 10751  
Amstrad ..... 10171, 10177  
Amtron ..... 10000, 10180  
Anam ..... 10180  
Anam National ..... 10055  
AOC ..... 10180, 10030, 10185  
Apex Digital1 ..... 0156, 10748, 10879, 10765,  
..... 10185, 10767, 11943  
Audinac ..... 10180  
Audiovox ..... 10451, 10180, 10092, 10623,  
..... 10802, 10875, 11937, 11951, 11952  
Aventura ..... 10171  
Axion ..... 11937  
Baysonic ..... 10180  
Beaumark ..... 10017, 10178, 10030  
Belcor ..... 10030  
Bell & Howell ..... 10054, 10154, 10093  
BenQ ..... 11032  
Boxlight ..... 10893  
Bradford ..... 10180  
Brockwood ..... 10178, 10030  
Broksonic ..... 10236, 10463, 10180, 10177,  
..... 11929, 11935, 11938  
Candle ..... 10030  
Capehart ..... 10017, 10178, 10030, 10092  
Carnivale ..... 10030  
Carver ..... 10054  
Celebrity ..... 10000  
Celera ..... 10765  
Changhong ..... 10156, 10765, 10767, 10783  
Cineral ..... 10451, 10092  
Citek ..... 10047  
Citizen ..... 10054, 10000, 10451, 10463,  
..... 10180, 10060, 10030, 10171,  
..... 10092, 10282, 11928  
Civet ..... 10185  
Clairtone ..... 10185

Clarion ..... 10180  
Classic ..... 10030, 10092  
Colortyme ..... 10047, 10054, 10017, 10060,  
..... 10178, 10030, 10018  
Commercial Solutions ..... 11447, 10047  
Conic ..... 10178  
Contec ..... 10180, 10185  
Craig ..... 10180, 10171, 10282  
Crosley ..... 10054, 10000, 10180, 10030, 10171, 10187  
Crown ..... 10093, 10180, 10672  
Crown Mustang ..... 10672  
Curtis Mathes ..... 10047, 10054, 10154, 10000,  
..... 10051, 10451, 10093, 10180, 0060,  
..... 10702, 10178, 10030, 10145, 10166,  
..... 10018, 10466, 11147, 11347, 11919  
CXC ..... 10180  
Cytron ..... 11326  
Daewoo ..... 10451, 10178, 10092, 11661, 10623,  
..... 10661, 10672, 11755, 11756, 11928  
Dayton ..... 10092  
Daytron ..... 10178, 10030, 10092  
Dell ..... 11080, 11178  
Denon ..... 10145, 10055, 10511  
Denstar ..... 10628  
Digital Life10872  
Dumont ..... 10017, 10180, 10178  
Durabrand ..... 10463, 10180, 10178, 10171, 11034  
Dwin ..... 10093, 10720, 10774  
Eaton ..... 10060  
Electroband ..... 10000, 10185  
Electrograph ..... 11755  
Electrohome ..... 0154, 10000, 10150, 10178,  
..... 10030, 10151, 10185  
Emerald ..... 10178, 10177  
Emerson ..... 10047, 10154, 10451, 10236, 10463,  
..... 10180, 10150, 10178, 10171, 11944,  
..... 11929, 11928, 10623, 10282, 10185,  
..... 10177, 10135

Envision ..... 10030, 10813  
Epson ..... 10833, 10840  
ESA ..... 10812, 10171, 11944  
Fisher ..... 10054, 10154, 10000, 10159  
Fortress ..... 10093  
Fujitsu ..... 10683, 10809, 10853  
Funai ..... 10000, 10180, 10171, 11904  
Futuretech ..... 10180  
Gateway ..... 11755, 11756  
GE ..... 11447, 10047, 10000, 10051, 10451,  
..... 10060, 10178, 10030, 10135, 10055,  
..... 10282, 11147, 11347, 10018, 11917,  
..... 11919, 11922  
Gemini ..... 10047  
Gibraltar ..... 10017, 10000, 10030  
Go Video ..... 10886  
Go Vision ..... 11937  
GoldStar ..... 10047, 10054, 10178, 10030,  
..... 10018, 11154, 11926  
Gradiente ..... 10053  
Grundig ..... 10706, 10672, 10683  
Grundy ..... 10180  
Grunpy ..... 10180  
Haier ..... 11034, 10768  
Hallmark ..... 10236, 10180, 10178, 10135, 10187  
Harley Davidson ..... 10000, 10180, 10060,  
..... 10178, 10030, 11904  
Harman/Kardon ..... 10054  
Harvard ..... 10180  
Havermy ..... 10093  
Heathkit ..... 10017  
Helios ..... 10865  
Hello Kitty ..... 0451  
Hewlett Packard ..... 11089, 11494, 11502  
Hisense ..... 10748  
Hitachi ..... 10047, 10054, 10017, 10000, 10051,  
..... 10178, 11145, 10145, 10018, 10055,  
..... 10151, 10185, 11904, 11960

HP .....	11089, 11494, 11502	.....	10802, 11254, 11755, 11904, 11931, 11944	Optonica.....	10093, 10165
Hyundai.....	10849, 10865	Majestic.....	10017	Orion.....	10017, 10236, 10463, 10180,
Ima.....	10236, 10180, 10178	Marantz.....	11454, 10054, 10030, 10704,	.....	10178, 11463, 10177, 11929
Infinity.....	10054	.....	10854, 10855, 11154	Pace.....	10092
Insignia.....	10171, 11326, 11517	Matsui.....	10177	Panasonic.....	10054, 10000, 10156, 10250,
Inteq.....	10017, 10145	Matsushita.....	10250, 10051, 10650	.....	10051, 10236, 10030, 10018,10055, 10650,
JBL.....	10054	Maxent.....	11755, 11756	.....	11291, 11410, 11919, 11941, 11946, 11947
JCB.....	10000	Megapower.....	10700	Panda.....	10706
Jensen.....	10761, 10815, 10817, 11933	Megatron.....	10047, 10178, 10145, 10151	Paxonic.....	10060, 10030
JIL.....	10030	MEI.....	10185	PCE.....	10156, 10060
Jutan.....	10030	Memorex.....	10154, 10463, 10180, 10150,	Penney.....	10047, 10000, 10156, 10250,10051,
JVC.....	10054, 10053, 10030, 10055, 10731, 11253	.....	10178, 10030, 10165, 11926	.....	10060, 10178, 10030,10018, 10135,
Kamp.....	10017, 10180, 10185	MGA.....	10150, 10178, 10030	.....	10159, 11347, 11919, 11926
Kawasho.....	10030, 10185	MGN Technology.....	10178	Philco.....	10054, 10463, 10030, 10145, 10187
KEC.....	10180, 10060	Micro Genius.....	10150	Philips.....	11454, 10054, 10030, 10171,
Kenwood.....	10180, 10030	Midland.....	10047, 10017, 10051, 10018, 10135	.....	10187, 10690, 11154, 11254
KLH.....	10156, 10180, 10765, 10767	Mitsubishi.....	10154, 10250, 10093, 11250,10150,	Pilot.....	10051, 10060, 10178, 10030
Kloss.....	10030	.....	10178, 10030, 10836,10868, 11917	Pioneer.....	10166, 10055, 10679, 10866, 11260
Konka.....	10180, 10080, 10628, 10632,	Monivision.....	10700, 10843	Polaroid.....	10765, 10865, 11262, 11276,11314,
.....	10638, 10703, 10707, 10720	Motorola.....	10054, 10051, 10093, 10150, 10055	.....	11316, 11326, 11327, 11328, 11341
Kost.....	11262	MTC.....	10180, 10060, 10030, 10092, 10185, 10282	Portland.....	10451, 10092
KTV.....	10463, 10180, 10030, 10185	Multitech.....	10180	Precision.....	10236, 10180, 10177, 10185, 10282
Lark.....	10154	NAD.....	10156, 10178, 10166, 10866	Prima.....	10761, 10783, 10815, 10817, 11933
LG.....	10054, 11265, 10060, 10178,	NEC.....	10047, 10156, 10178, 10030, 10497,	Princeton.....	10700, 10717
.....	10030,10700, 10856, 11154,	.....	10704, 10882, 11704	Prism.....	10250, 10051, 10055
.....	11178, 11758	NetTV.....	11755	Proscan.....	11447, 10047, 10018, 10135,
Lloyd's.....	10236, 10180, 10030, 11904	Nikko.....	10178, 10030, 10092	.....	10466, 11347, 11922
Logik.....	10236, 10180	Nikkodo.....	10178, 10030, 10092	Proton.....	10178, 10466
LXI.....	10047, 10054, 10017, 10154,	Nishi.....	10030, 10018	Pulsar.....	10017, 10092
.....	10000, 10156, 10051, 10093,	Norcent.....	10748, 10824, 11089	Pulser.....	10178, 10092
.....	10060, 10053, 10178, 10030,	Noshi.....	10018	Quartz.....	10150, 10178
.....	10171, 10166, 10055, 10135,	NTC.....	10092	Quasar.....	10250, 10051, 10055, 10165, 10650, 11919
.....	10018, 10159, 10165	Nyon.....	10000	Rabbit.....	10047
Magnasonic.....	10054, 10000, 10156, 10093,	Olevia.....	11144, 11240, 11331	Radio Shack.....	10047, 10154, 10180, 10150, 10178,
.....	10030, 10092, 11928	Onwa.....	10180	.....	10030, 10165, 11904
Magnavox.....	10047, 11454, 10054, 10154,10000,	Optimus.....	10154, 10250, 10093, 10180, 10150,		
.....	10250, 10051, 10180,10060, 10030,	.....	10178, 10030, 10166, 10165, 10650		
.....	10171, 10092,10706, 10187, 10282, 10386,	Optoma.....	10887		



## Television, con't

RCA.....11447, 10047, 10054, 10000, 10051,  
.....10093, 10178, 11958,11953, 11948,  
.....11922, 11919, 11917, 11547, 11347,  
.....11247,11147, 11047, 10774, 10679,  
.....10165, 10135, 10090, 10018  
Realistic.....10047, 10154, 10180, 10150,  
.....10178, 10030, 10165  
Rhapsody .....10185  
Road Authority .....10282  
Runco.....10017, 10060, 10030, 10497, 10603  
Sampo .....10047, 10030, 11755, 11756  
Samsung.....10047, 10054, 10017, 10154, 10060,  
.....10812, 10702, 10178,0030, 11959, 11903,  
.....11312, 11060, 10814, 10766, 10587, 10055  
Sanky .....10060, 10030  
Sansui.....10463, 10060, 10030, 10165,  
.....11904, 11929, 11935  
Sanyo.....10047, 10054, 10154, 10000, 10463,  
.....10171, 10159, 10799, 10893, 11755  
Saville .....10060  
Sceptre .....10878  
Scotch.....10178  
Scott.....10236, 10180, 10178, 10030, 10177  
Sears.....10047, 10054, 10017, 10154, 10000,  
.....10156, 10051, 10093, 0060, 10053,  
.....10178, 10030, 10171, 10166, 10055,  
.....10135, 10018, 10159, 10165, 11904, 11926  
Sharp.....10054, 10093, 10180, 10165, 10386, 10491,  
.....10688, 10689, 10818, 10851, 11393, 11917  
Sheng Chia.....10093  
Shivaki .....10178  
Siemens .....10145  
Signature.....10047, 10093, 10030, 10165, 10187  
Signet .....11262  
Simpson.....10178, 10030, 10187  
Singer.....10060, 10092  
Solar Drape .....10000

Sole.....10813  
Sony .....10017, 10154, 11100, 10000, 10150,10053,  
.....10080, 10632, 10834, 11904, 11925  
Soundesign.....10180, 10178  
Sova.....11952  
Spectravisio.....10156, 10178, 10159  
Squareview.....10171  
SR2000 .....10154, 10171  
SSS.....10180  
Starlite.....10236, 10180  
Studio Experience.....10843  
Superscan.....10093, 10864, 11944  
Supreme .....10000  
SV2000 .....10054  
SVA .....10748, 10587, 10768, 10865,  
.....10870, 10871, 10872  
Sylvania.....10047, 10054, 10154, 10000, 10051,  
.....10178, 10030, 10171, 10092, 10159,  
.....10187, 11904, 11926, 11931, 11944  
Symphonic .10000, 10180, 10178, 10171, 11904, 11944  
Syntax .....11144, 11240, 11331  
Tandy.....10093, 10165  
Tatung .....10000, 10051, 10055, 11756  
Teac.....10154, 10706, 10159, 10282, 10689  
Technics .....10054, 10250, 10051, 10055  
Technovox .....10030  
Techview .....10847  
Techwood.....10250, 10051, 10060, 10055  
Teknika .....10054, 10463, 10180, 10150,  
.....10060, 10178, 10092  
Telecolor.....10017  
Telefunken.....10702  
Thomas.....10047, 10178, 11904  
Thomson .....11447, 10047  
TMK .....10236, 10180, 10178, 10177  
TNCi .....10017  
Tocom.....10156  
Tomashi.....10282

Toshiba .....10154, 11256, 10156, 10150, 11265,  
.....10060, 11145, 10145, 10166, 11945, 11936,  
.....11935, 11918, 11704, 11656, 11356, 11156,  
.....10845, 10832, 10650  
Tosonic .....10185  
Totevision.....10051  
Toyomenka.....10178  
Truetone .....10250, 10051, 10055  
TVS .....10463  
Ultra .....10092  
Universal .....10047, 10135  
Universum.....10177  
V.....10864, 10885, 11755, 11756  
Vector Research .....10030  
Victor .....10053  
Vidikron.....10054  
Vidtech.....10178  
Viewsonic.....10857, 10864, 10885, 11578, 11755  
Viking .....10060  
Vizio.....10864, 10885, 11499, 11756, 11758  
Wards .....10047, 10054, 10017, 10154, 10000,10051,  
.....10093, 10236,10178, 10030, 10166, 11156,  
.....10866, 10187, 10165, 10151,  
.....10080, 10018  
Waycon.....10156  
Welton .....10178  
Westinghouse.....10000, 10451, 10885, 10889, 11282  
White Westinghouse.....10451, 10236, 10463,  
.....10623, 10889  
World.....10451, 10236, 10463, 10180  
XR-1000 .....10154, 10180, 10171  
Yamaha .....10030, 10769, 10833, 10839  
Yorx.....10030  
Zenith.....10047, 10017, 10000, 10093, 10463,  
.....11265, 10812, 10178, 10030, 11145,  
.....10145, 10171, 10092, 11904, 11929

**TV/DVD Combination**

Advent.....	11933
Akai.....	11935
Apex Digital.....	11943
Audiovox.....	11937, 11951, 11952
Axion.....	11937
Broksonic.....	11935
Hitachi.....	11960
Jensen.....	11933
Panasonic.....	11941
Prima.....	11933
RCA.....	11948, 11958
Samsung.....	11903
Sansui.....	11935
Sova.....	11952
Toshiba.....	11935

**TV/VCR Combination**

America Action.....	10180
Audiovox.....	10180
Broksonic.....	11929
Citizen.....	11928
Curtis Mathes.....	11919
Daewoo.....	11928
Emerson.....	10236, 11928, 11929
Funai.....	11904
GE.....	11917, 11919, 11922
GoldStar.....	11926
Harley Davidson.....	11904
Hitachi.....	11904
Lloyd's.....	11904
Magnasonic.....	11928
Magnavox.....	11904, 11931
Memorex.....	11926
Mitsubishi.....	11917
Orion.....	11929
Panasonic.....	11919
Penney.....	11919, 11926

Quasar.....	11919
RadioShack.....	11904
RCA.....	11917, 11919, 11922
Samsung.....	11959
Sansui.....	11904, 11929
Sears.....	11904, 11926
Sharp.....	11917
Sony.....	11904, 11925
Sylvania.....	11931
Symphonic.....	11904
Thomas.....	11904
Toshiba.....	11918, 11936
Zenith.....	11904, 11929

**TV/VCR/DVD Combination**

Akai.....	11903
Broksonic.....	11938
Emerson.....	11944
ESA.....	11944
Magnavox.....	11944
Panasonic.....	11946, 11947
RCA.....	11953
Sharp.....	11917
Sylvania.....	11944
Symphonic.....	11944
Toshiba.....	11945

**VCR**

A-Mark.....	20037, 20240, 20000, 20278, 20046
ABS.....	21972
Admiral.....	20060, 20048, 20039, 20047, 20104, 20209, 20020, 20062, 20479
Adventura.....	20037, 20240, 20000
Adyson.....	20072
Aiko.....	20278
Aiwa.....	20037, 20000, 20124, 20307, 20479
Akai.....	20041, 20061, 20106, 20175
Alba.....	20209, 20072, 20278

Alienware.....	21972
Allegro.....	20039
America Action.....	20278
American High.....	20035, 20081
Amstrad.....	20000
Asha.....	20240
Astra.....	20035, 20240
Audiovox.....	20037, 20278, 20038
Avis.....	20000, 20072
Beaumarck.....	20240
Bell & Howell.....	20035, 20048, 20039, 20000, 20104, 20046, 20479
Broksonic.....	20184, 20121, 20209, 20002, 20208, 20479, 21479
Calix.....	20037
Candle.....	20037, 20038
Canon.....	20035
Capehart.....	20002, 20020, 20062
Carrera.....	20240
Carver.....	20035, 20081
CCE.....	20072, 20278
Cineral.....	20278
Citizen.....	20035, 20037, 20240, 20000, 20209, 20278, 20479, 21278
Classic.....	20037
Colortyme.....	20060, 20035, 20045, 20278
Colt.....	20000, 20072
Craig.....	20037, 20047, 20240, 20072, 20271
Criterion.....	20000, 20072
Crosley.....	20035, 20081, 20000, 20149
Crown.....	20072, 20278
Curtis Mathes.....	20060, 20035, 20162, 20240, 20000, 20041, 20278, 20432, 20760, 21035
Cybernex.....	20240
CyberPower.....	21972
Daewoo.....	20037, 20045, 20278, 20020, 20046, 20561, 21278
Daytron.....	20037, 20278, 20020



<b>VCR, con't</b>		
Dell.....	21972	
Denon.....	20081, 20042	
Derwent.....	20041	
DirecTV.....	20739	
Dual.....	20000	
Durabrand.....	20039, 20038	
Dynatech.....	20240, 20000	
Electrohome.....	20060, 20037, 20240, 20000, .....20043, 20209, 20061	
Electrophonic.....	20037	
Emerald.....	20184, 20121	
Emerex.....	20032	
Emerson.....	20037, 20184, 20240, 20000, .....20121, 20043, 20209, 20002, 20278, .....20202, 20208, 20061, 20479, 20561, .....20593, 21278, 21479, 21593	
Fisher.....	20039, 20047, 20000, 20104, 20046	
Fuji.....	20035, 20033	
Fujitsu.....	20045, 20000	
Funai.....	20037, 20000, 20072, 20278, 20593, 21593	
Garrard.....	20000	
Gateway.....	21972	
GE.....	20060, 20035, 20048, 20240, 20000, 20149, .....20202, 20760, 20807, 21035, 21060	
Gemini.....	20060	
General.....	20045	
Genexxa.....	20037, 20000, 20278	
Go Video.....	20240, 20432, 20526, 20614	
GoldStar.....	20035, 20037, 20039, 20000, .....20278, 20038, 21237	
Goodmans.....	20037, 20081, 20000, 20072, .....20278, 20020, 20062	
Gradiente.....	20000, 20008	
Granada.....	20081, 20042	
Grundig.....	20081	
Harley Davidson.....	20000	
Harman/Kardon.....	20081, 20038	
Harvard.....	20072	
Harwood.....	20072	
Headquarter.....	20046	
Hewlett Packard.....	21972	
HI-Q.....	20035, 20047, 20000	
Hitachi.....	20035, 20037, 20045, 20000, 20042, .....20041, 20089, 20105, 21037	
Howard Computers.....	21972	
HP.....	21972	
Hughes Network Systems.....	20042, 20739	
Humax.....	20739	
Hush.....	21972	
Hytek.....	20047, 20000, 20072	
iBUYPOWER.....	21972	
ITT Nokia.....	20240, 20041	
Janeil.....	20240	
Jensen.....	20067, 20041	
JVC.....	20067, 20041, 20008, 20061, 21162	
KEC.....	20037, 20278	
Kenwood.....	20067, 20041, 20038, 20046	
KLH.....	20072	
Kodak.....	20035, 20037	
KTV.....	20000	
LG.....	20037, 20240, 20038, 21037	
Linksys.....	21972	
Lloyd's.....	20240, 20000, 20072, 20038, 20208	
Loewe.....	20081	
Logik.....	20240, 20000, 20072	
Lumatron.....	20278	
Luxor.....	20046, 20106	
LXI.....	20037, 20000, 20042, 20067	
M Electronic.....	20240	
Magnasonic.....	20037, 20240, 20000, 20072, 20278, .....20020, 20593, 21278	
Magnavox.....	20035, 20037, 20048, 20039, 20081, .....20240, 20000, 20149, 20563, 20593, .....20618, 21593, 21781	
Magnin.....	20240	
Marantz.....	20035, 20081, 20038, 20062	
Marta.....	20037	
Matsui.....	20037, 20209	
Matsushita.....	20035, 20162, 20081, 21162	
Media Center PC.....	21972	
MEI.....	20035	
Memorex.....	20035, 20162, 20037, 20048, 20039, .....20047, 20240, 20000, 20104, 20209, .....20072, 20278, 20062, 20046, 20307, .....20479, 21037, 21162, 21237, 21262	
Metz.....	20037	
MGA.....	20060, 20240, 20043, 20061	
MGN Technology.....	20240	
Microsoft.....	21972	
Midland.....	20240	
Mind.....	21972	
Minolta.....	20042, 20105	
Mitsubishi.....	20060, 20048, 20047, 20000, 20042, .....20067, 20043, 20041, 20061, 20807	
Motorola.....	20035, 20048	
Movie Walker.....	20072	
MTC.....	20240, 20000, 20072	
MTX.....	20000	
Multitech.....	20039, 20000, 20072	
NAD.....	20240, 20104	
NEC.....	20104, 20067, 20041, 20038	
New Tech.....	20072	
Nikko.....	20037, 20278	
Nikkodo.....	20037, 20278	
Nishi.....	20240	
Niveus Media.....	21972	
Noblex.....	20240	
Northgate.....	21972	
Olympus.....	20035, 20162, 20104	
Onkyo.....	20222	
Optimus.....	21062, 20035, 20162, 20037, 20048, .....20047, 20240, 20000, 20104, 20062,	



.....	20432, 20593, 21048, 21162, 21262	Realistic.....	20035, 20162, 20037, 20048, 20047,	.....	20593, 21593, 21781
Optonica.....	20062	.....	20240, 20000, 20104, 20121, 20278,	Symphonic .....	20240, 20000, 20002, 20593, 21593
Orion.....	20184, 20240, 20000, 20104, 20121,	.....	20046, 20062, 21162	Systemax.....	21972
.....	20209, 20002, 20278, 20208, 20479, 21479	ReplayTV .....	20614, 20616	Tagar Systems.....	21972
Panama.....	20035	Ricavision .....	21972	Tandy.....	20000, 20104
Panasonic.....	21062, 20035, 20162, 20000,	Runco.....	20039	Tatung.....	20048, 20081, 20000, 20067, 20041, 20008
.....	20020, 20225, 20614, 20616,	Samsung.....	20060, 20240, 20045, 20000,	Teac.....	20000, 20067, 20041
.....	21035, 21162, 21262	.....	20038, 20432, 20739, 21014	Technics .....	20035, 20162, 20037, 20000
Penney.....	20035, 20162, 20037, 20047, 20081,	Samtron.....	20240	Teknika .....	20035, 20037, 20000
.....	20240, 20000, 20042, 20067,	Sanky.....	20048, 20039	Telecorder.....	20240
.....	20038, 21035, 21237	Sansui.....	20240, 20000, 20067, 20209, 20041,	Telefunken.....	20041, 20208
Pentax.....	20042, 20105	.....	20072, 20002, 20271, 20479, 21479	Tevion.....	20479
Philco.....	20035, 20081, 20000, 20209, 20479	Sanyo.....	20047, 20240, 20000, 20104,	Thomas.....	20000, 20002
Philips.....	20035, 20162, 20048, 20081, 20045,	.....	20046, 20159, 20479	Thomson.....	20060, 20041, 20202
.....	20000, 20209, 20062, 20616, 20618,	Scientific Atlanta.....	20008	Tisonic.....	20278
.....	20739, 21081, 21181	Scott.....	20184, 20045, 20121, 20043, 20208	Tivo.....	20618, 20636, 20739, 21996
Pilot.....	20037	Sears.....	20060, 20035, 20162, 20037, 20048, 20039,	TMK.....	20240, 20000, 20208
Pioneer.....	20162, 20081, 20042, 20067	.....	20047, 20033, 20045, 20000, 20042, 20104,	TNIX.....	20037
Polk Audio.....	20081	.....	20067, 20043, 20209, 20041, 20072, 20046,	Tocom.....	20240
Portland.....	20278, 20020	.....	20105, 21237	Toshiba.....	20240, 20045, 20000, 20042, 20043,
Presidian.....	21593	Sharp.....	20048, 20047, 20032, 20000,	.....	20209, 20041, 20062, 20845, 21008,
Profitronic.....	20240	.....	20062, 20807, 20848	.....	21145, 21972, 21996
Proscan.....	20060, 20202, 20760, 21060	Shintom.....	20039, 20240, 20000, 20072, 20208	Tosonic.....	20278
Protec.....	20000, 20072	Shogun.....	20240	Totevision.....	20037, 20240
Protech.....	20072	Siemens.....	20037, 20104	Touch.....	21972
Pulsar.....	20039, 20240, 20278	Signature.....	20060, 20035, 20037, 20048,	Trix.....	20037
Pulser.....	20240	.....	20000, 20149, 20046, 20479	Ultra.....	20045, 20278, 20020
Quarter.....	20046	Singer.....	20037, 20240, 20072	Unitech.....	20240
Quartz.....	20035, 20047, 20046	Sonic Blue.....	20614, 20616	Vector.....	20045
Quasar.....	20035, 20162, 20002, 21035, 21162	Sonographe.....	20046	Vector Research.....	20184, 20038
RadioShack.....	20035, 20162, 20037, 20048,	Sony.....	20035, 20047, 20032, 20033, 20000,	Vextra.....	20072
.....	20047, 20240, 20000, 20104,	.....	20067, 20046, 20636, 21032, 21232, 21972	Victor.....	20067, 20041, 20008
.....	20046, 20062, 21037, 21162	Soundmaster.....	20000	Video Concepts.....	20045, 20061
Radix.....	20037	Stack.....	921972	Videomagic.....	20037
Randex.....	20037	STS.....	20042, 20105	Videosonic.....	20240, 20000, 20072
RCA.....	20060, 20035, 20048, 20240, 20045,	SV2000.....	20000, 20072	Viewsonic.....	21972
.....	20000, 20042, 20149, 20105, 20106, 20202,	SVA.....	20000	Villain.....	20000
.....	20760, 20807, 20880, 21035, 21060	Sylvania.....	20035, 20081, 20000, 20043,	Voodoo.....	21972

**VCR, con't**

Wards .....	20060, 20035, 20037, 20048, 20047,
.....	20081, 20033, 20240, 20045, 20000,
.....	20042, 20043, 20041, 20072, 20038,
.....	20149, 20046, 20062, 20479, 20760
Wharfedale.....	20593
White Westinghouse .....	20000, 20209, 20072, 20278,
20479	
World.....	20209, 20002, 20479
XR-1000 .....	20035, 20240, 20000, 20072, 20208
Yamaha .....	20041, 20038
Zenith.....	20037, 20039, 20033, 20000, 20209,
.....	20041, 20278, 20479, 21139, 21479
ZT Group .....	21972

**DBS/PVR Combination**

Hughes Network Systems .....	20739
Philips .....	20739
Samsung.....	20739

**DVD/PVR Combination**

Emerson .....	20000
RCA.....	20880
Sylvania.....	20000
Toshiba .....	21008, 21996

**PVR**

ABS.....	21972
Alienware.....	21972
CyberPower.....	21972
Dell.....	21972
DirecTV .....	20739
Gateway .....	21972
Hewlett Packard .....	21972
Howard Computers .....	21972
HP .....	21972
Hughes Network Systems .....	20739
Humax.....	20739

Hush .....	21972
iBUYPOWER.....	21972
Linksys.....	21972
Media Center PC.....	21972
Microsoft.....	21972
Mind.....	21972
Niveus Media .....	21972
Northgate .....	21972
Panasonic .....	20616
Philips .....	20618, 20739
RCA.....	20880
ReplayTV .....	20614, 20616
Samsung.....	20739
Sonic Blue.....	20614, 20616
Sony .....	20636, 21972
Stack 9.....	21972
Systemax.....	21972
Tagar Systems .....	21972
Tivo .....	20618, 20636, 20739
Toshiba .....	21008, 21972, 21996
Touch.....	21972
Viewsonic.....	21972
Voodoo.....	21972
ZT Group .....	21972

**TV/VCR Combination**

Aiwa .....	20479
America Action.....	20278
Audiovox.....	20278
Broksonic .....	20002, 20479, 21479
Citizen .....	21278
Colt.....	20072
Curtis Mathes.....	21035
Daewoo .....	21278
Emerson .....	20002, 20479, 20593, 21278, 21479
Funai .....	20000
GE .....	20240, 20807, 21035, 21060
GoldStar.....	21237

Harley Davidson .....	20000
Hitachi.....	20000
LG .....	21037
Lloyd's.....	20000
Magnasonic.....	20593, 21278
Magnavox.....	20000, 20593, 21781
Magnin.....	20240
Memorex .....	20162, 21037, 21162, 21237, 21262
MGA .....	20240
Mitsubishi .....	20043, 20807
Optimus.....	20162, 20593, 21162, 21262
Orion.....	20002, 20479, 21479
Panasonic .....	20162, 21035, 21162, 21262
Penney.....	20240, 21035, 21237
Quasar.....	20162, 21035, 21162
RadioShack .....	20000, 21037
RCA.....	20240, 20807, 21035, 21060
Samsung.....	21014
Sansui.....	20000, 20479, 21479
Sanyo.....	20240
Sears.....	20000, 21237
Sharp.....	20807
Sony .....	20000, 21232
Sylvania.....	21781
Symphonic .....	20000, 20593
Thomas.....	20000
Toshiba.....	20845, 21145
Zenith.....	20000, 20479, 21479

**TV/VCR/DVD Combination**

Sharp.....	20807
------------	-------

**DVD Blue Ray Disk Players**

Integra.....	22147
LG .....	20741
Marantz.....	22414
Onkyo .....	22147
Panasonic .....	21641

Sony .....	21516	Clairtone .....	20571	Goodmans .....	20790
Samsung .....	20199	Coby .....	20778, 21086, 21107, 21177	Gradiente .....	20490, 20651
<b>DVD Players</b>		Craig .....	20831	Greenhill .....	20717
3D LAB .....	20503, 20539	Creative .....	20503, 20539	Grundig .....	20539, 20705
Accurian .....	21072, 21416	Curtis Mathes .....	21087	Harman/Kardon .....	20582, 20702
Acoustic Solutions .....	20730	CyberHome .....	20816, 20874, 21023, 21024, ..... 21117, 21129, 21502	Hitachi .....	20573, 20664, 21247, 21764
Advent .....	21016	Cytron .....	20705	Hiteker .....	20672
Afreedy .....	20698	Daewoo .....	20784, 20705, 20770, 20833, 20869, ..... 21169, 21172, 21234, 21242	Humax .....	21588
Aiwa .....	20641	Dansai .....	20770	iLo .....	21348
Akai .....	20695, 20705, 20770, 20899, 21089	Daytek .....	20872	Initial .....	20717
Alba .....	20672, 20717	Decca .....	20770	Insignia .....	21268
Alco .....	20790	Denon .....	20490, 20634	Integra .....	20571, 20627
Allegro .....	20869	Denver .....	20778	IRT .....	20783
Amphion Media Works .....	20872	Desay .....	21407	JBL .....	20702
AMW .....	20872	Digitrex .....	20672	Jensen .....	21016
Apex Digital .....	20533, 20672, 20717, 20755, 20794, ..... 20796, 20797, 20830, 21004, 21020, ..... 21056, 21061, 21100	Disney .....	20675, 21270	JMB .....	20695
Arrgo .....	21023	DiViDo .....	20705	JVC .....	20558, 20623, 20867, 21164
Aspire Digital .....	21168, 21407	Dual .....	20675, 21068, 21085	Kawasaki .....	20790
Audiovox .....	20717, 20790, 21041, 21071, ..... 21072, 21121, 21122	Durabrand .....	21127	Kenwood .....	20490, 20534
Awa .....	20730	DVD2000 .....	20521	KLH .....	20717, 20790, 21020, 21149
Axion .....	21071, 21072	Electrohome .....	21003	Kloss .....	20533
Blaupunkt .....	20717	Emerson .....	20591, 20675, 20821, 21268	Koss .....	20651, 21061
Blue Parade .....	20571	Enterprise .....	20591	Lasonic .....	20627, 20798
Blue Sky .....	20695	Entivo .....	20503, 20539	Lecson .....	21533
Bose .....	21895	Enzer .....	20770	Lenoxx .....	21127
Brandt .....	20651	ESA .....	20821, 21268	LG .....	20591, 20741, 20801, 20869
Broksonic .....	20695, 20868	Firstline .....	20651	LiteOn .....	21058, 21158, 21416, 21440
Byd:sign .....	20872	Fisher .....	20670	Loewe .....	20511, 20741
California Audio Labs .....	20490	Funai .....	20675, 21268, 21334	Logix .....	20783
Celestial .....	21020	Gateway .....	21073, 21158	Magnasonic .....	20651, 20675
Centrex .....	20672, 21004	GE .....	20522, 20815, 20717	Magnavox .....	20503, 20539, 20646, ..... 20675, 20821, 21268
Cinea .....	20831	Go Video .....	20573, 20744, 20717, 20715, ..... 20741, 20783, 20833, 20869, 21044, ..... 21075, 21099, 21158, 21304, 21730	Malata .....	20782, 21159
CineVision .....	20876, 20833, 20869	Go Vision .....	21071, 21072	Marantz .....	20503, 20539, 20675
Citizen .....	21003, 21277	GoldStar .....	20741, 20801, 20869	McIntosh .....	21533
				Medion .....	20651
				Memorex .....	20695, 20831, 21270
				Microsoft .....	20522, 21708

**DVD Players, con't**

Minato.....	20752
Mintek.....	20839, 20717
Mitsubishi.....	21521, 20521, 21403
Momitsu.....	21082
Mustek.....	20730
NAD.....	20591, 20741
Naiko.....	20770
NEC.....	20785, 20869
Nesa.....	20717
NexxTech.....	21402
Norcent.....	21003, 20872, 21107, 21265
Onkyo.....	20503, 20627, 20792
Optimus.....	20571
Oritron.....	20651
Palsonic.....	20672
Panasonic.....	20503, 20490, 20571, 20703, 21362, 21462, 21490, 21632, 21762
Philips.....	20503, 20539, 20646, 20675, 20854, 21260, 21267, 21354
PianoDisc.....	21024
Pioneer.....	20525, 20571, 20631
Polaroid.....	21020, 21061, 21086
Polk Audio.....	20539
Portland.....	20770
Presidian.....	20675, 21072
Prima.....	21016
Proceed.....	20672
Proscan.....	20522
ProVision.....	20778
Qwestar.....	20651
Radionette.....	20741
RadioShack.....	20571
RCA.....	20522, 20571, 20717, 20790, 20822, 21022, 21132
Realistic.....	20571
Reoc.....	20752
Rio.....	20869

Rotel.....	20623
Rowa.....	20823, 21004
Saba.....	20651
Sampo.....	20698, 20752
Samsung.....	20490, 20573, 20744, 20820, 20899, 21044, 21075
Sansui.....	20695
Sanyo.....	20670, 20675, 20695, 20873, 21334
Schneider.....	20783
Schwaiger.....	20752
Sensory Science.....	21158
Sharp.....	20630, 20675, 20752, 21256, 21642
Sharper Image.....	21117
Sherwood.....	20770, 21043
Shinonic.....	20533, 20839
Slim Art.....	20784
SM Electronic.....	20730
Sonic Blue.....	20573, 20715, 20783, 20869, 21099
Sony.....	20533, 21533, 20864, 21033, 21070, 21431
Sova.....	21122
Superscan.....	20821
SVA.....	20717, 20860
Sylvania.....	20675, 20821, 21268
Symphonic.....	20675, 20821, 21268, 21334
Tatung.....	20770
Teac.....	20571, 20717, 20790
Technics.....	20490, 20703
Technika.....	20770
Technosonic.....	20730
Tevion.....	20651
Theta Digital.....	20571
Thomson.....	20522, 20511
Tivo.....	21503, 21588
Toshiba.....	20503, 20573, 20539, 20695, 21045, 21154, 21503, 21588, 21639
Tredex.....	20800
Unimax.....	20770

United.....	20730
Universum.....	20591
Urban Concepts.....	20503, 20539
US Logic.....	20839
V.....	21064, 21226
Venturer.....	20790
Victor.....	21597
Vizio.....	21064, 21226
Xbox.....	20522, 21708
Yamaha.....	20490, 20539, 20545
Yamakawa.....	20872
Zenith.....	20503, 20591, 20741, 20869
Zeus.....	20784
Zoece.....	21265

**DVD/PVR Combination**

Emerson.....	20675
Go Video.....	21730
Hitachi.....	21764
Mitsubishi.....	21403
Panasonic.....	20490, 21632
Pioneer.....	20631
RCA.....	20522
Sharp.....	20630, 21256, 21642
Sony.....	21033
Sylvania.....	20675
Toshiba.....	21503, 21639
Victor.....	21597

**TV/DVD Combination**

Advent.....	21016
Akai.....	20695
Apex Digital.....	20830
Audiovox.....	21071, 21121, 21122
Axion.....	21071
Broksonic.....	20695
Emerson.....	20675, 21268
ESA.....	21268

Funai .....	21268
Go Vision .....	21071
Hitachi.....	21247
Insignia .....	21268
Jensen.....	21016
Magnavox.....	21268
Panasonic .....	21490
Philips .....	20854, 21260
Prima.....	21016
RCA.....	21022
Samsung.....	20899
Sansui.....	20695
Sova.....	21122
Sylvania.....	20675, 21268
Toshiba .....	20695

**TV/VCR/DVD Combination**

Akai.....	20899
Broksonic .....	20868
Emerson .....	20821
ESA .....	20821
Funai .....	21334
Magnavox.....	20821
Panasonic .....	21362, 21462
RCA.....	21132
Sharp .....	20630
Superscan .....	20821
Sylvania.....	20821
Symphonic .....	20821
Toshiba .....	21045