

MA7900 Rear Panel Connections

DIGITAL AUDIO INPUTS for components with Digital Optical (1) and Coaxial (2) Outputs sending digital audio signals

RS232-C connector¹ for connection to a computer or other control device

POWER CONTROL TRIGger outputs 1 and 2 send turn On/Off signals to assignable components

USB D/A Digital Audio Input for connection to a computer


DATA PORTS send signals to Source Components to allow control with the MA7900 Remote Control

IR INput for signals from a compatible IR Room Sensor

POWER CONTROL MAIN Output sends turn On/Off signals to a McIntosh Component when the MA7900 is switched On/Off

RIGHT OUTPUT connections for a 2, 4 or 8 ohm loudspeaker

LEFT OUTPUT connections for a 2, 4 or 8 ohm loudspeaker

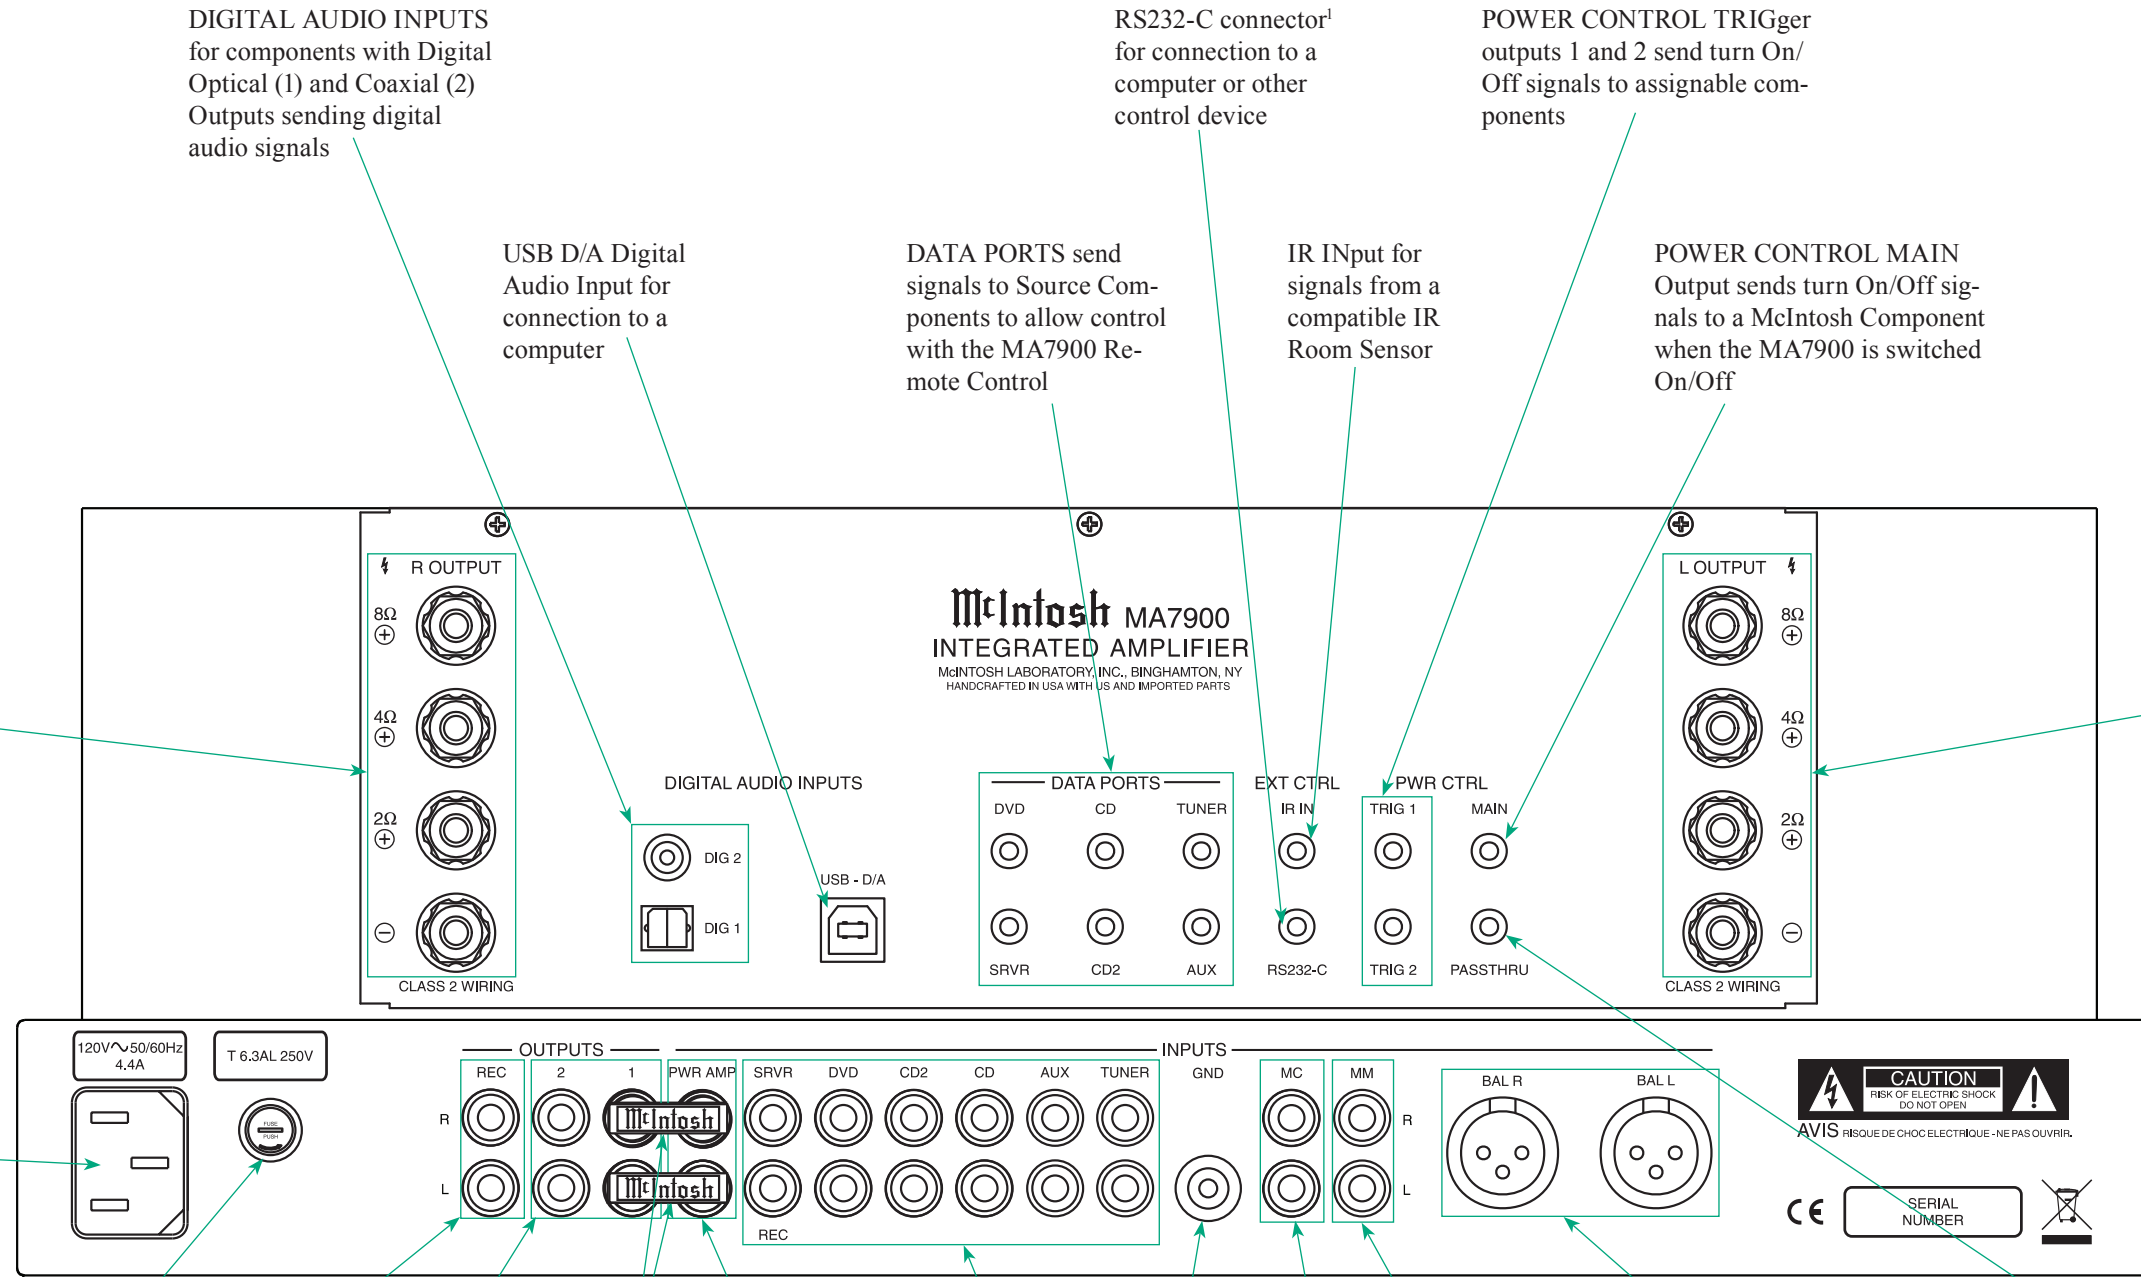

Connect the MA7900 power cord to a live AC outlet. Refer to information on the back panel of your MA7900 to determine the correct voltage for your unit

RECORD OUT sends signals to the input of a recording device

JUMPER PLUGS connect the Preamplifier OUTPUT 1 Jacks to the PWR AMP IN Jacks and are required for normal operation

SRVR(REC), DVD, CD2, CD, AUX and TUNER INPUTS accept high level program source signals

PHONO MC accepts the low level signals from a Moving Coil Phono Cartridge

BALANCED INPUTS accept high level program source signals

PASSTHRU Power Control Input receives turn On/Off signals from an Audio/Video Control Center

Main Fuse holder, refer to information on the back panel of your MA7900 to determine the correct fuse size and rating

OUTPUTS 1 and 2 send signals to Power Amplifiers and are switched On/Off with the Front Panel Output 1 and 2 Push-Buttons or Remote Control Push-Buttons

PWR AMP input accepts signals from the internal Preamplifier or a separate external Preamplifier

GND terminal accepts a ground wire from a turntable

PHONO MM accepts signals from a Moving Magnet Phono Cartridge

¹ Refer to page 5 of the MA7900 Owner's Manual for addition cable information.