

MA8000 Rear Panel Connections

DIGITAL AUDIO INPUTS for components with Digital Optical (1 and 3) Outputs sending digital audio signals

USB D/A Digital Audio Input for connection to a computer

RS232-C connector<sup>1</sup> for connection to a computer or other control device

POWER CONTROL TRIGger outputs 1 and 2 send turn On/Off signals to assignable components

BALanced INPUTS 1 and 2 accept high level program source signals

DIGITAL AUDIO INPUTS for components with Digital Coaxial (2 and 4) Outputs sending digital audio signals

DATA PORTS send signals to Source Components to allow control with the MA8000 Remote Control

IR INput for signals from a compatible IR Room Sensor

POWER CONTROL MAIN Output sends turn On/Off signals to a McIntosh Component when the MA8000 is switched On/Off

RIGHT OUTPUT connections for a 2, 4 or 8 ohm Loudspeaker

LEFT OUTPUT connections for a 2, 4 or 8 ohm Loudspeaker

Balanced OUTPUT 2 send signals to Power Amplifiers and is switched On/Off with the Front Panel Output 2 Push-Button or Remote Control Push-Button

Connect the MA8000 power cord to a live AC outlet. Refer to information on the back panel of your MA8000 to determine the correct voltage for your unit

RECORD OUT sends signals to the input of a recording device

JUMPER PLUGS connect the Preamplifier OUTPUT 1 Jacks to the PWR AMP IN Jacks and are required for normal operation

SRVR/REC, DVD, CD2, CD, AUX and TUNER INPUTS accept high level program source signals

PHONO MM accepts signals from a Moving Magnet Phono Cartridge

PASSTHRU Power Control Input receives turn On/Off signals from an Audio/Video Control Center


Main Fuse holder, refer to information on the back panel of your MA8000 to determine the correct fuse size and rating

Unbalanced OUTPUT 1 send signals to Power Amplifiers and is switched On/Off with the Front Panel Output 1 Push-Button or Remote Control Push-Button

PWR AMP input accepts signals from the internal Preamplifier or a separate external Preamplifier

GND terminal accepts a ground wire from a turntable

PHONO MC accepts the low level signals from a Moving Coil Phono Cartridge

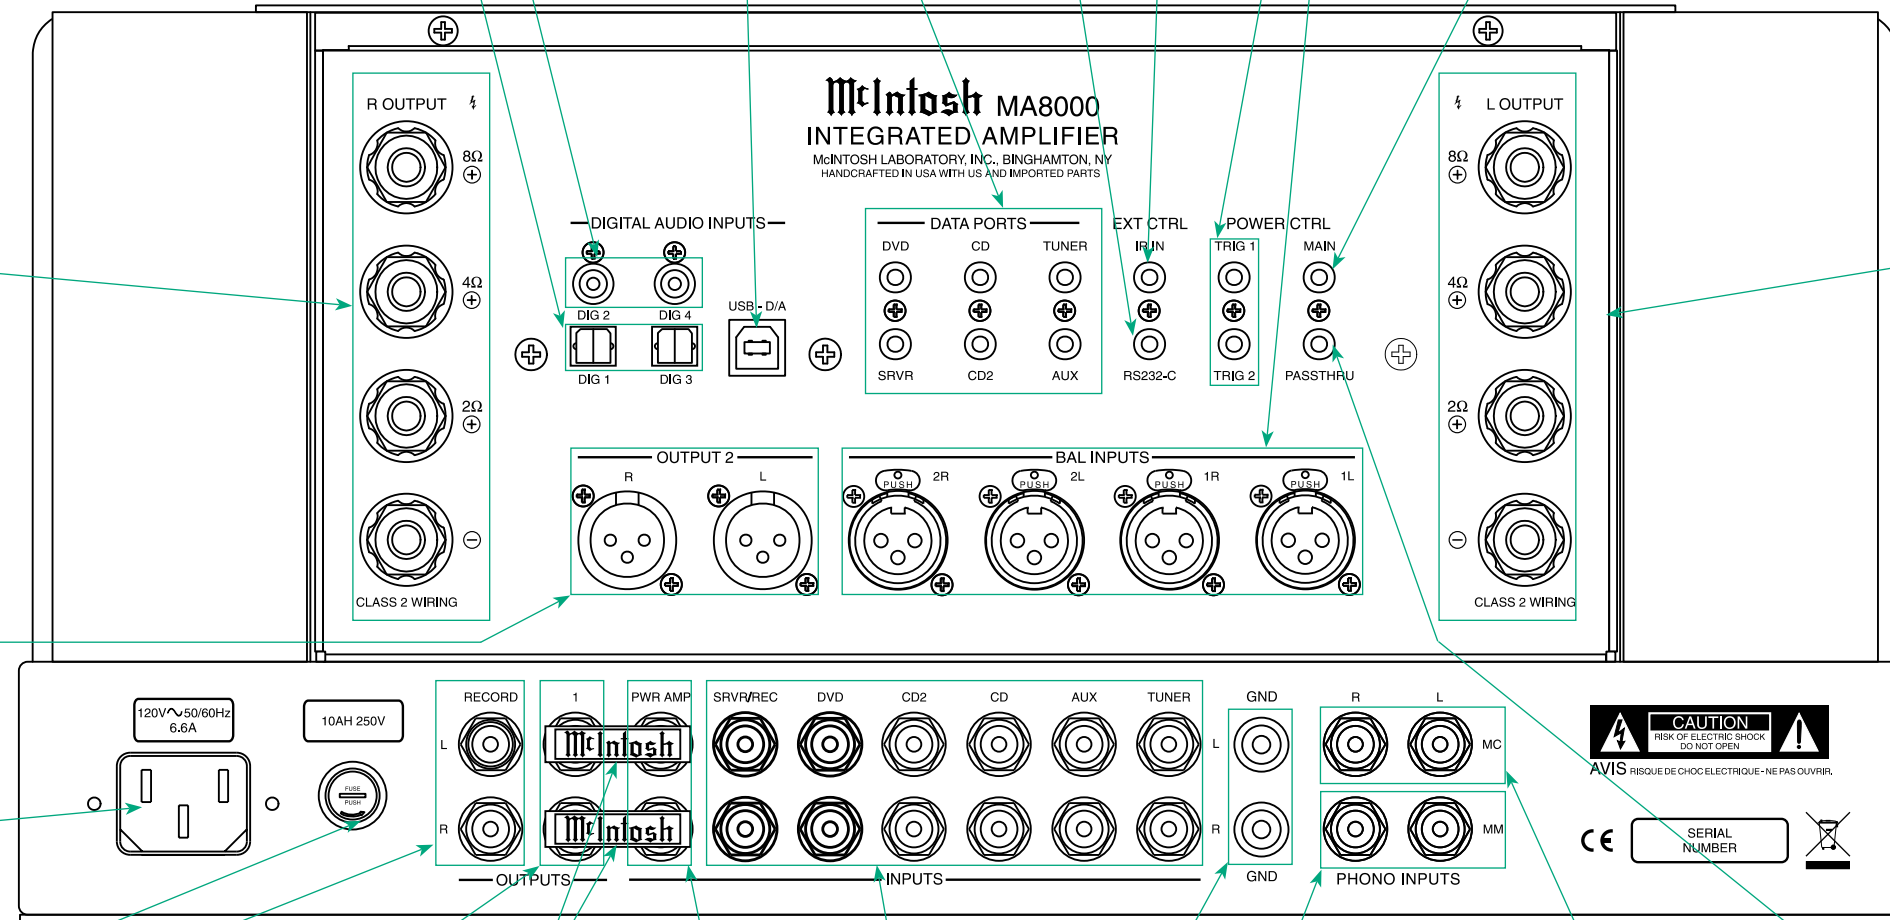

<sup>1</sup> Refer to page 4 of the MA8000 Owner's Manual for additional cable information.