


¹Refer to pages 6 and 7 for detailed information about utilization of the CHANNEL 1-8 Input Switches and the functioning of the BUS 1-2 INput and OUTput connection jacks, plus the DIG 1 and 2 Coaxial and Optical Connector Inputs



Note: Refer to the MI254 Owner's Manual pages 8 & 9 for additional connection information.



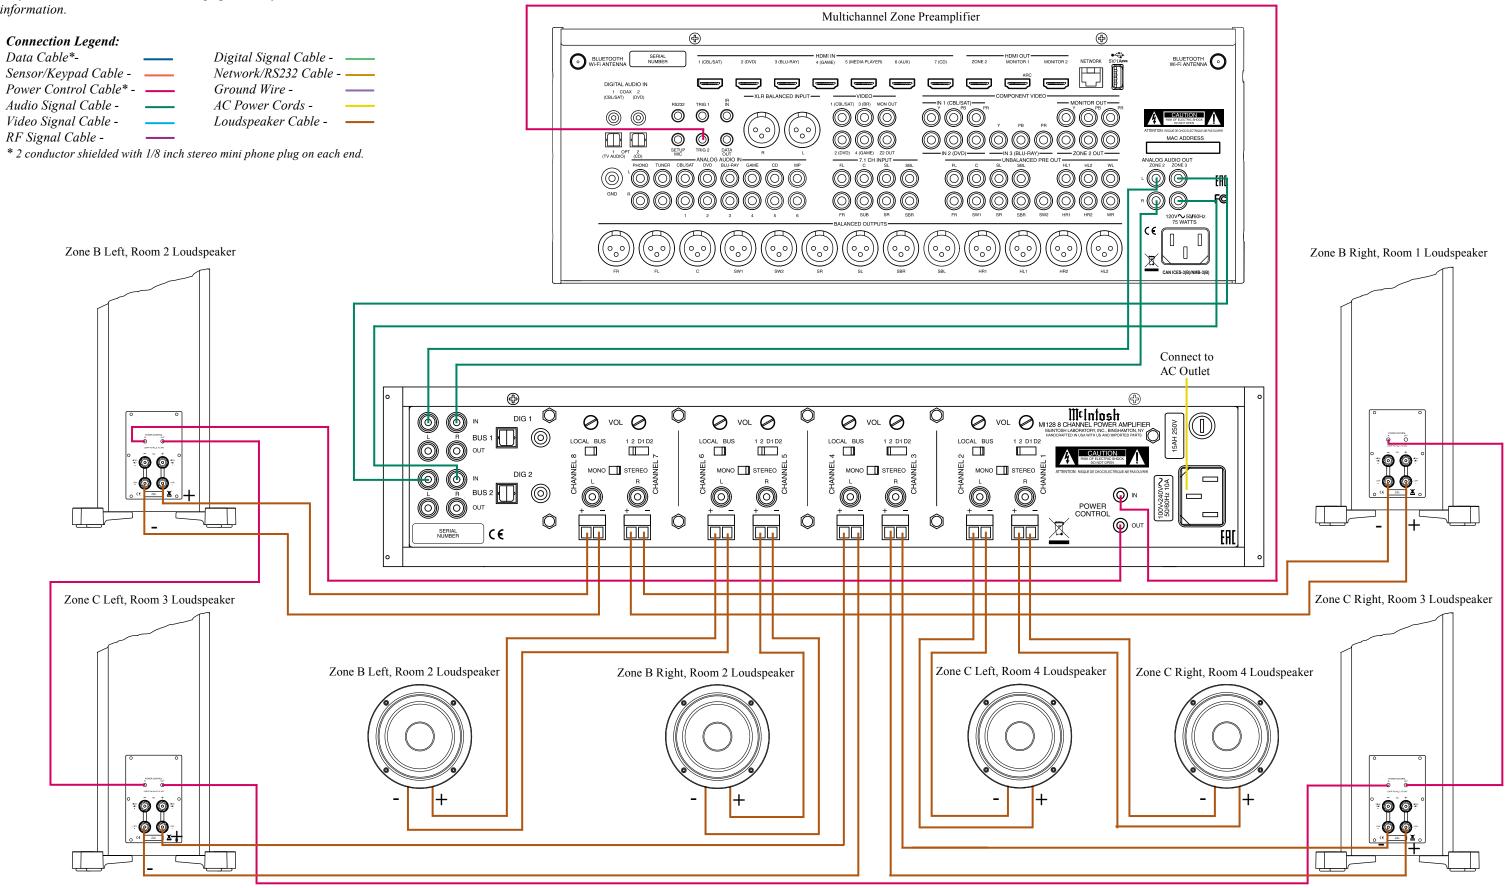

Note: Refer to the MI128 Owner's Manual pages 10 & 11 for additional connection information.

