

AI/P

MENU

(DVD)

SLEEP

ENTER

DEVICE CONTROL

SMART SELECT

1 2 3 4

SOUND MODE

(2) (3)

Milntosh

(7)

(6)

(0)

▶▶|

HOME

44

MUTE

SELECT

(U)

(CBL/SAT)

CH/PAGE

AVP

(b)

TV AUDIO (p)

(MENU)

TV

iPod USB



Push to enter codes for remote controlling McIntosh Source Component

For controlling McIntosh Source Component(s) after RC Codes have been entered

Indicates the currently selected Zone or Source Input the remote will control Selects the Main Zone, Zone 2 or Zone 3 the remote will control Selects one of the 14 available Audio Sources Steps through available Inputs and Displays the current On-Screen Input selection Use to scroll thru available Channels or Information Page for the selection of the active Zone Activates the MX122 Sleep Mode Turning Off in increments of 10 minutes to a maximum of 120 minutes Shows On-Screen Information for currently selected input For navigating the Menus On-Screen and make selections and used for a Variety of McIntosh Components Returns to the previous Setup Menu When the Input Source is OnLine Music or iPod/USB, pressing the HOME Push-button will return the Video to the Home Screen (Top Screen) Press to select tuner presets and disc tracks. Also used to skip and search buttons for Internet Radio Press to step through various choices for each of the four main catagories (Movie, Music, Game or Pure) Use to select numbered operations

Press to Power the MX122 ON and OFF

Once the control codes for a specific TV Model have been setup, it can switch Power On/Off, TV Menu or select the available TV Video/Audio Source

Displays Status of the Selected Assignable Input

Press to activate the back lighting of the remote control LCD Display

Adjusts the volume level up or down

Mutes the audio

Activates the On-Screen Menu for selection of various Audio/Video features

Activates Setup Mode, returns to the previous menu and/or exits Setup Mode

Controls transport Stop, Pause and Play Functions

Press to Tune Up or Down the Selected Band for Tuner Component

Press to recall a previously programmed Preset (Input, Volume Level and Sound Mode) for the currently selected Zone Note: In order for some of the Remote Control Push-Button Commands to be implemented by the MX122, such as activating the MENU SETUP Function, the LCD Display on the Remote Control needs to indicate "AVP". If the LCD Display does not indicate "AVP", press the AVP Push-button first before pressing the SETUP Push-button.