 


MX122 Rear Panel Connections

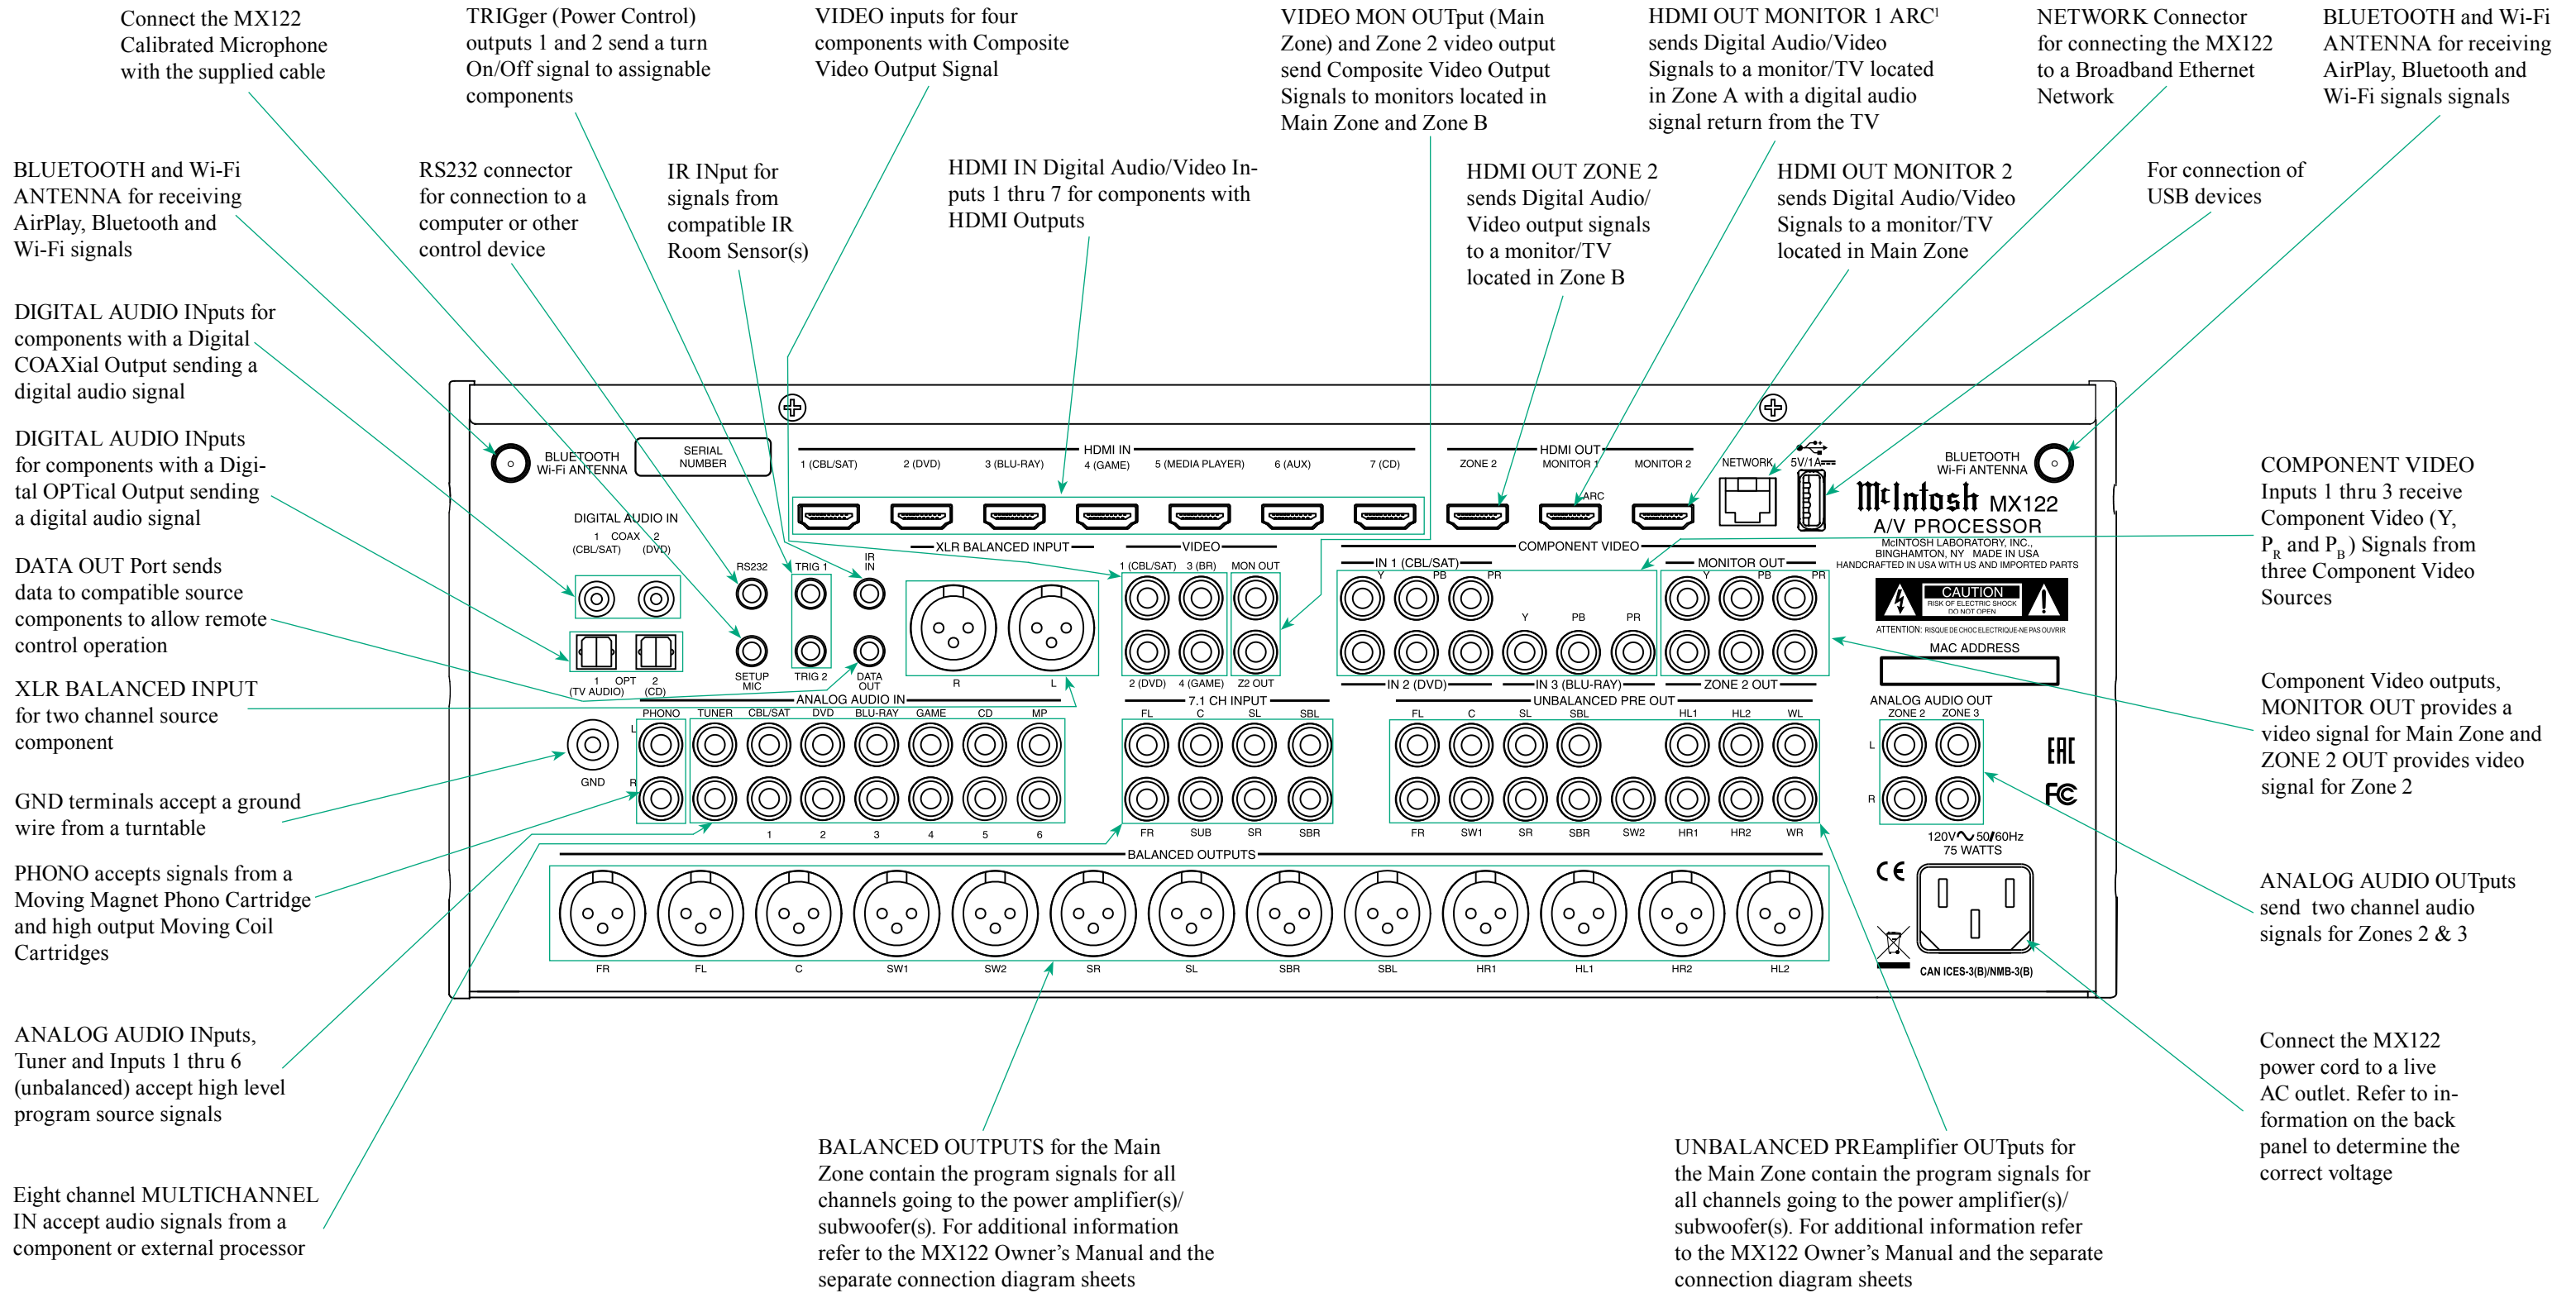

¹ When there is a connection between the Main Zone HDMI output and a TV/Monitor the Component Video 1 and 2 Outputs will not show on-screen menus or operational status

INPUT Control allows the selection of various sources for listening and viewing in Main Zone and Zones 2 & 3

Indicates when the Main Zone Input Source selected is being processed by Dolby Digital or DTS Circuitry. Indicates when Main Zone Audio is being processed by the Audyssey Circuitry. Also indicates when the INPUT/OUTPUT FORMAT indicators on the Front Panel are displaying the Input or Output Audio Signal Channel Status

 
Information Display indicates Input Selection Status, Volume, Surround Modes, Menu Setup options and various other functions

Indicates the Input or Output Format of which channels are active; FL (Front Left), C (Center), FR (Front Right), SL (Surround Left), LFE (Low Frequency Effects), SR (Surround Right), SBL (Surround Back Left), S (Pro Logic Surround) and SBR (Surround Back Right)

Indicates when incoming Audio Signal is Analog or Digital. Also indicates when the incoming signal (Audio/Video) is from a HDMI Input. The Multizone indicator displays when Zone 2 and/or Zone 3 are/is active

Adjusts the Listening Volume Level for Main Zone, Zone 2 or Zone 3

Allows navigation and selection of various Setup and User functions

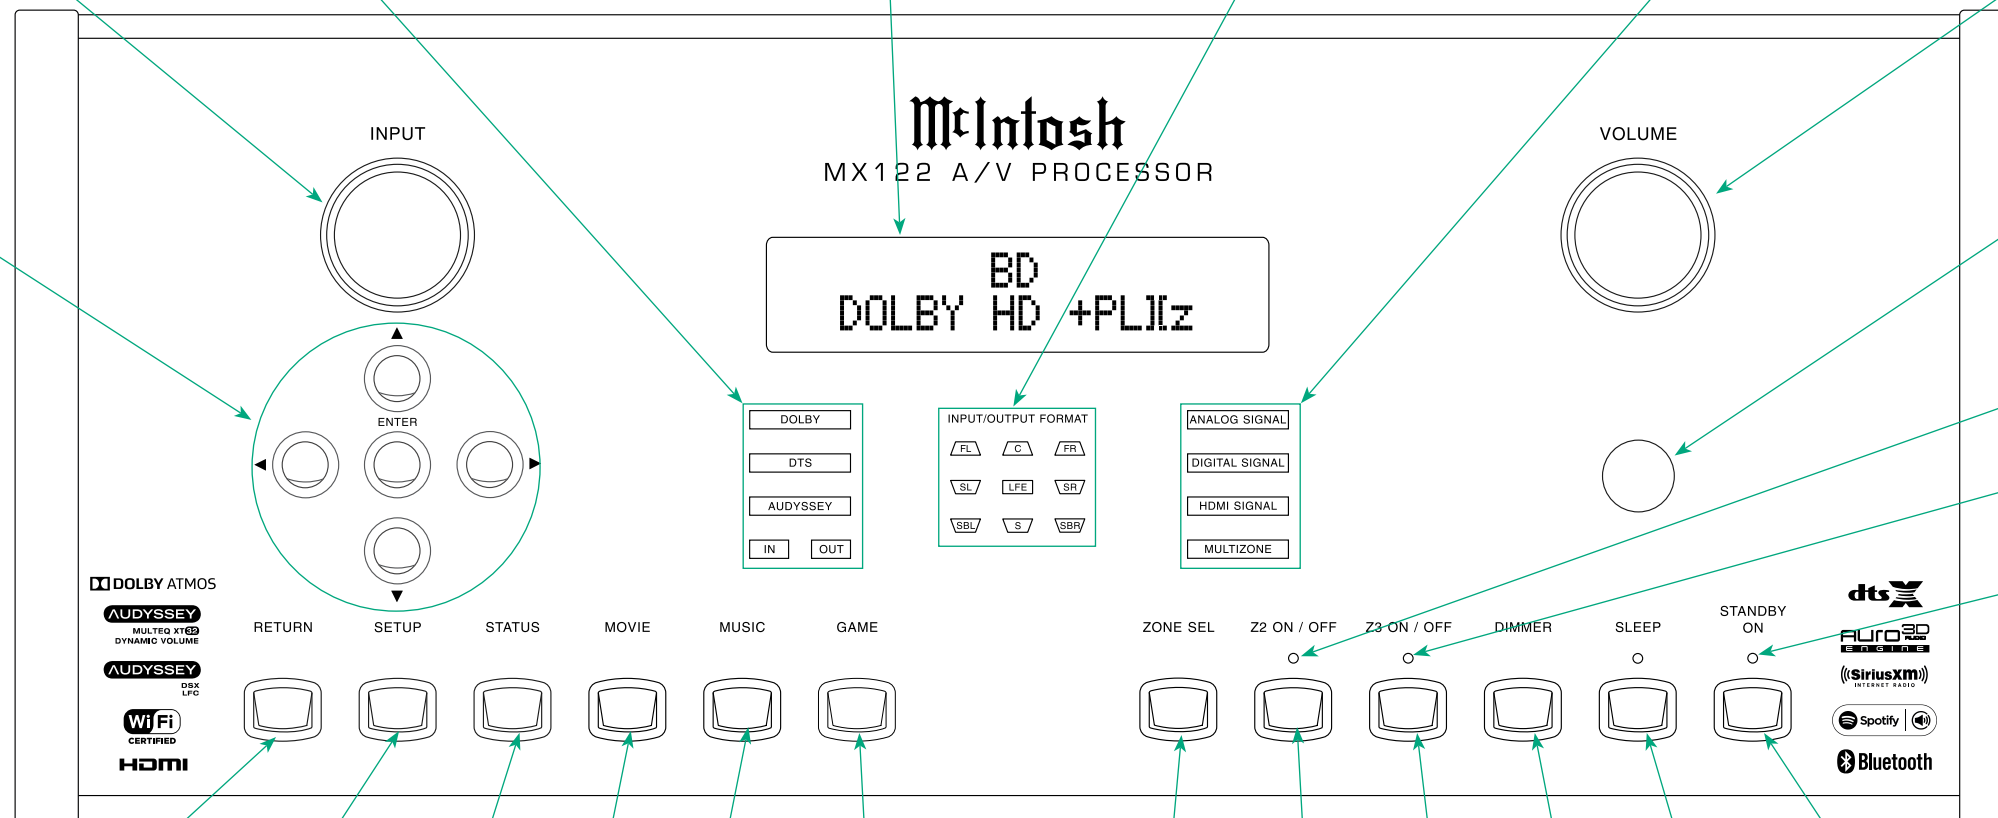

Return to the previous On-Screen Menu Selection

Press to display status of the currently selected Input that has re-assignable capabilities

Make changes to the music sound track default audio processing mode

Make changes to the video game sound track default audio processing mode

Allows Zone Selection for operation of the Front Panel Controls

Turns Zone 2 On and Off

Turns Zone 3 On and Off

Select from two different brightness settings or switch off the Front Panel Information Display

Activates Sleep Mode and selects Sleep Time

Switches the Main Zone On and Off

IR (Infra Red) Sensor accepts IR signals directly from the Remote Control

Indicates when Zone 2 is on

Indicates when Zone 3 is on

Indicates when the MX122 is in Standby/On Mode