

MC 502
POWER AMPLIFIER

McIntosh[®]

OWNERS MANUAL

Your MC 502 Stereo Power Amplifier will give you many years of pleasant and satisfactory performance. If you have any questions, please contact:

CUSTOMER SERVICE

McIntosh Laboratory Inc.
2 Chambers Street
Binghamton, New York 13903
Phone: 607-723-3512

**Take Advantage of 3 years
of Contract Service . . .
Fill in the Application NOW.**

Contents

HOW TO INSTALL . . .	2,3
HOW TO CONNECT . . .	4
THE FRONT PANEL CONTROLS AND HOW TO USE THEM . . .	7
REAR PANEL INFORMATION . . .	8
PERFORMANCE LIMITS . . .	9
PERFORMANCE CHARTS . . .	10,11
TECHNICAL DESCRIPTION . . .	12,13
BLOCK DIAGRAM . . .	14

McINTOSH THREE YEAR SERVICE CONTRACT

An application for A THREE YEAR SERVICE CONTRACT is included with this manual. The terms of the contract are:

1. McIntosh will provide all parts, materials and labor needed to return the measured performance of the instrument to the original performance limits. The SERVICE CONTRACT does not cover any shipping costs to and from the authorized service agency or the factory.
2. Any McIntosh authorized service agency will repair McIntosh instruments at normal service rates. To receive service under the terms of the SERVICE CONTRACT, the SERVICE CONTRACT CERTIFICATE must be presented when the instrument is taken to the service agency.
3. Always have service done by a McIntosh authorized service agency. If the instrument is modified or damaged as a result of unauthorized repair, the SERVICE CONTRACT will be cancelled. Damage by improper use or mishandling is not covered by the SERVICE CONTRACT.
4. The SERVICE CONTRACT is issued to you as the original purchaser. To protect you from misrepresentation, this contract cannot be transferred to a second owner.
5. To receive the SERVICE CONTRACT, your purchase must be made from a McIntosh franchised dealer.
6. Your completely filled in application for the SERVICE CONTRACT must be post-marked within 30 days of the date of purchase of the instrument.
7. To receive the SERVICE CONTRACT, all information on the application must be filled in. The SERVICE CONTRACT will be issued when the completely filled in application is received by McIntosh Laboratory Incorporated in Binghamton, New York.
8. Units in operation outside the United States and Canada are not covered by the McIntosh Factory Service Contract, irrespective of the place of purchase. Nor are units acquired outside the U.S.A. and Canada, the purchasers of which should consult with their dealer to ascertain what, if any, service contract or warranty may be available locally.

Installation

The PANLOC system of installing equipment conveniently and securely is a product of McIntosh research. By depressing the two PANLOC buttons on the front panel, the instrument slide can be locked firmly in place or it can be unlocked so that the chassis can slide forward, giving you easy access to the top and rear panels.

The trouble-free life of an electronic instrument is greatly extended by providing sufficient ventilation to prevent the buildup of high internal temperatures that cause deterioration. Allow enough clearance so that cool air can enter at the bottom of the cabinet and be vented from the top. With adequate ventilation the instrument can be mounted in any position.

The recommended minimum space for installation is 15 inches (38.1 cm) deep, 17 inches (43.2 cm) wide, and 4-1/2 inches (11.4 cm) high.

To install the instrument in a McIntosh cabinet, follow the instructions that are enclosed with the cabinet. For any other type of installation follow these instructions:

1. Open the carton and remove the PANLOC brackets, hardware package, and mounting template from the carton. Remove the MC 502 from its plastic bag and place it upside down on the shipping pallet; unscrew the four plastic feet from the bottom of the chassis.

2. Mark the cabinet panel.


Place the mounting template in the position on the cabinet panel where the instrument is to be installed, and tape it in place. The broken lines that represent the outline of the rectangular cutout also represent the outside dimensions of the chassis. Make sure these lines clear shelves, partitions, or any equipment. With the template in place, first mark the six A and B holes and the four small holes that locate the corners of the cutout. Then, join the four corner markings with pencil lines, using the edge of the template as a straightedge.



3. Drill Holes

Use a drill with a 3/16 inch bit held perpendicular to the panel and drill the six A and B holes. Then, using a drill bit slightly wider than the tip of your saw blade, drill one hole at each of two diagonally opposite corners. The holes should barely touch the inside edge of the penciled outline. **Before taking the next step, make sure that the six A and B holes have been drilled.**

4. Saw the Panel Cutout

Saw carefully on the inside of the penciled lines. First make the two long cuts and then the two short cuts. After the rectangular opening has been cut out, use a file to square the corners and smooth any irregularities in the cut edges.

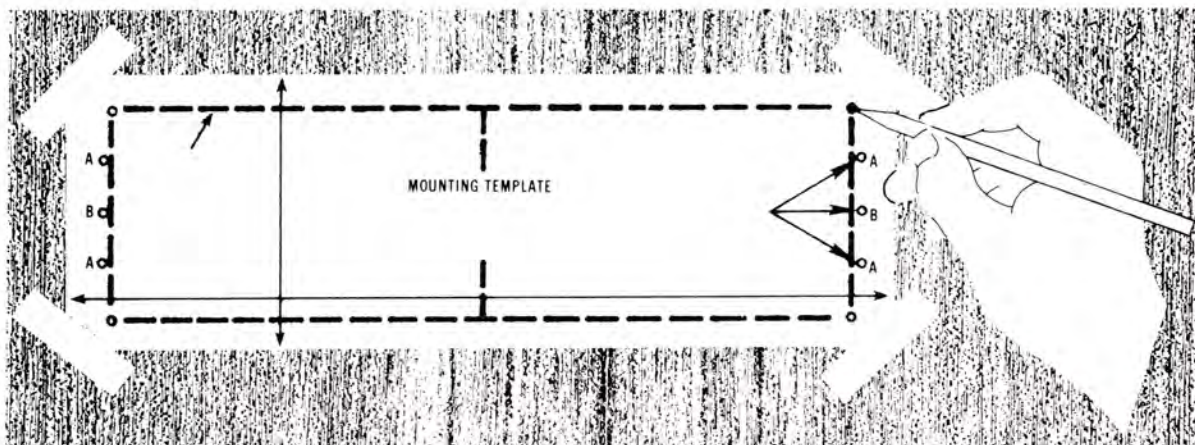

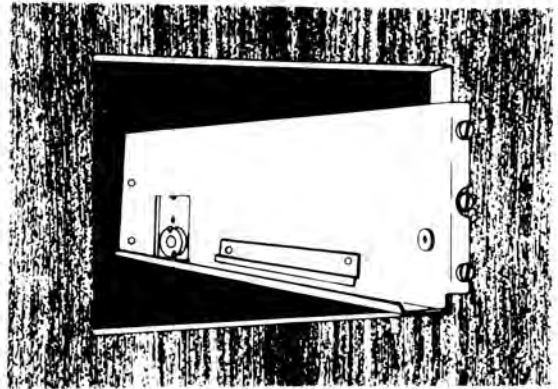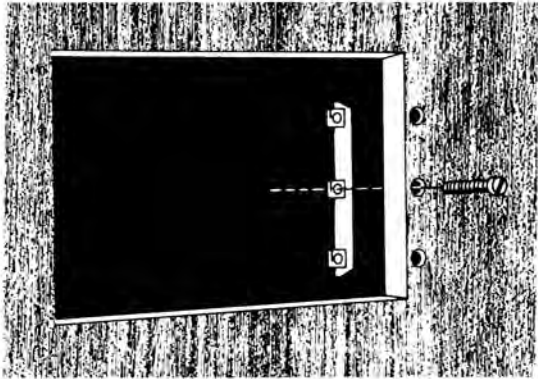

5. Install the Mounting Strips

In the hardware package you will find two mounting strips, and two sets of machine screws. For panels that are less than 1/2 inch thick, use the 3/4 inch screws; for panels that are more than 1/2 inch thick, use the 1-1/4 inch screws.

Starting at the right-hand side of the panel, insert a screw of the proper length into the center hole in the panel, marked B on the template. On the back of the panel, align a mounting strip with the holes in the panel and tighten the screw until the screwhead is pulled into the wood.

Repeat this procedure to attach the mounting strip to the left side of the panel.

6. Attach the PANLOC Brackets

Using two screws of the proper length in the A holes on each side, attach the PANLOC brackets to the cabinet panel; the short flange is mounted against the front (face) of the cabinet panel. The screws pass through the PANLOC bracket flange, the cabinet panel, and then through the mounting strips previously mounted.

7. Install the Instrument

Guide the AC power cord through the panel opening to the back of the cabinet; then, slide the instrument into the opening carefully so that the rails on the bottom of each side of the chassis engage the tracks on the mounting brackets. Continue to slide the instrument into the cabinet until it is stopped by the adjust position latches. Press the latches inward, this permits the instrument to slide into the cabinet until its front panel is flush with the cabinet panel. Depress the PANLOC buttons at the lower left and right corners of the instrument panel to lock the unit firmly in the cabinet. Depressing the PANLOC buttons again will unlock the instrument so that it can slide forward to the adjust position; if you press inward on the adjust position latches then you can remove the instrument from the cabinet.

How to Connect



INPUT

STEREO OR TWIN AMPLIFIER OPERATION

Use shielded cables to connect the signal from the preamplifier or signal source to the power amplifier input. To minimize the possibility of hum the shielded cables should be run parallel to each other or loosely twisted together. Locate the cables away from speaker leads and AC power cords. All connections are made on the back panel of the MC 502.

For stereo operation, the left output of the preamplifier should be plugged into the Left input jack of the power amplifier. The right output of the preamplifier should be plugged into the Right (MONO) input jack of the power amplifier.

MONOPHONIC OR SINGLE CHANNEL OPERATION

A shielded cable from the signal source is plugged into the Right (MONO) input jack of the MC 502 only. The MODE SWITCH on the back panel of the amplifier must be placed in the MONO position. In the MONO position the right channel input jack connects to both amplifiers. The Left INPUT is disconnected.

OUTPUT

Selection of the proper gauge wire to connect the loudspeakers preserves the quality of sound reproduction for which the loudspeakers have been designed. If undersize wire is used, resistance is added to the amplifier/loudspeaker combination which adversely affects the performance. Added resistance causes reduction of damping characteristics, modification of frequency response and reduction in power output.

Use lamp cord, bell wire, or wire with similar type of insulation to connect the speakers to the amplifier. In all cases, the leads to and from the speaker should be twin conductor or twisted together. When using 8 ohm speakers and for the normally short distances of under 30 feet between the amplifier and speaker, No. 18 wire or larger can be used. For distances over 30 feet between the amplifier and speaker use larger diameter wire. Select the correct size wire for the wire length from the chart. It is recommended that the DC resistance of the speaker leads be less than 5% of the speaker impedance. Up to 10% can be tolerated. Resistance of the leads should be computed for the length of wire both to and from the speaker or speakers.

MAXIMUM WIRE LENGTHS

Wire Gauge	For 4 Ohm Load		For 8 Ohm Load	
	Feet	Meters	Feet	Meters
22	6	1.8	12	3.7
20	10	3.1	20	6.1
18	15	4.6	30	9.1
16	25	7.6	50	15.2
14	40	12.2	80	24.4
12	60	18.3	120	36.6
10	100	30.5	200	66.0

Wire lengths above represent the wire resistance equal to 5% of the speaker impedance.

For multiple speaker operation, run separate leads from the amplifier to the speakers.

CONNECTING LOUDSPEAKERS FOR STEREO

Connect the leads from the left loudspeaker to the Left and Common OUTPUT terminals on the MC 502. Connect the leads from the right main loudspeaker to the Right and Common terminals.

CONNECTING ONE LOUDSPEAKER FOR MONO

Connect leads from the loudspeaker to the Left and Right OUTPUT terminals on the MC 502. Check to be sure the MODE switch is in the MONO position.

In MONO operation neither output terminal (Left or Right) is at ground potential. The output is balanced to ground. Due precaution is required when connecting test instruments since neither terminal can be grounded.


AC POWER

The amplifier AC power cord is plugged into a 120 volt 50/60 Hz wall outlet.


FUSE

A 4-amp fuse protects the MC 502 circuits. The fuse does not protect additional equipment connected to the rear panel AC power outlets.

Stereophonic Connections

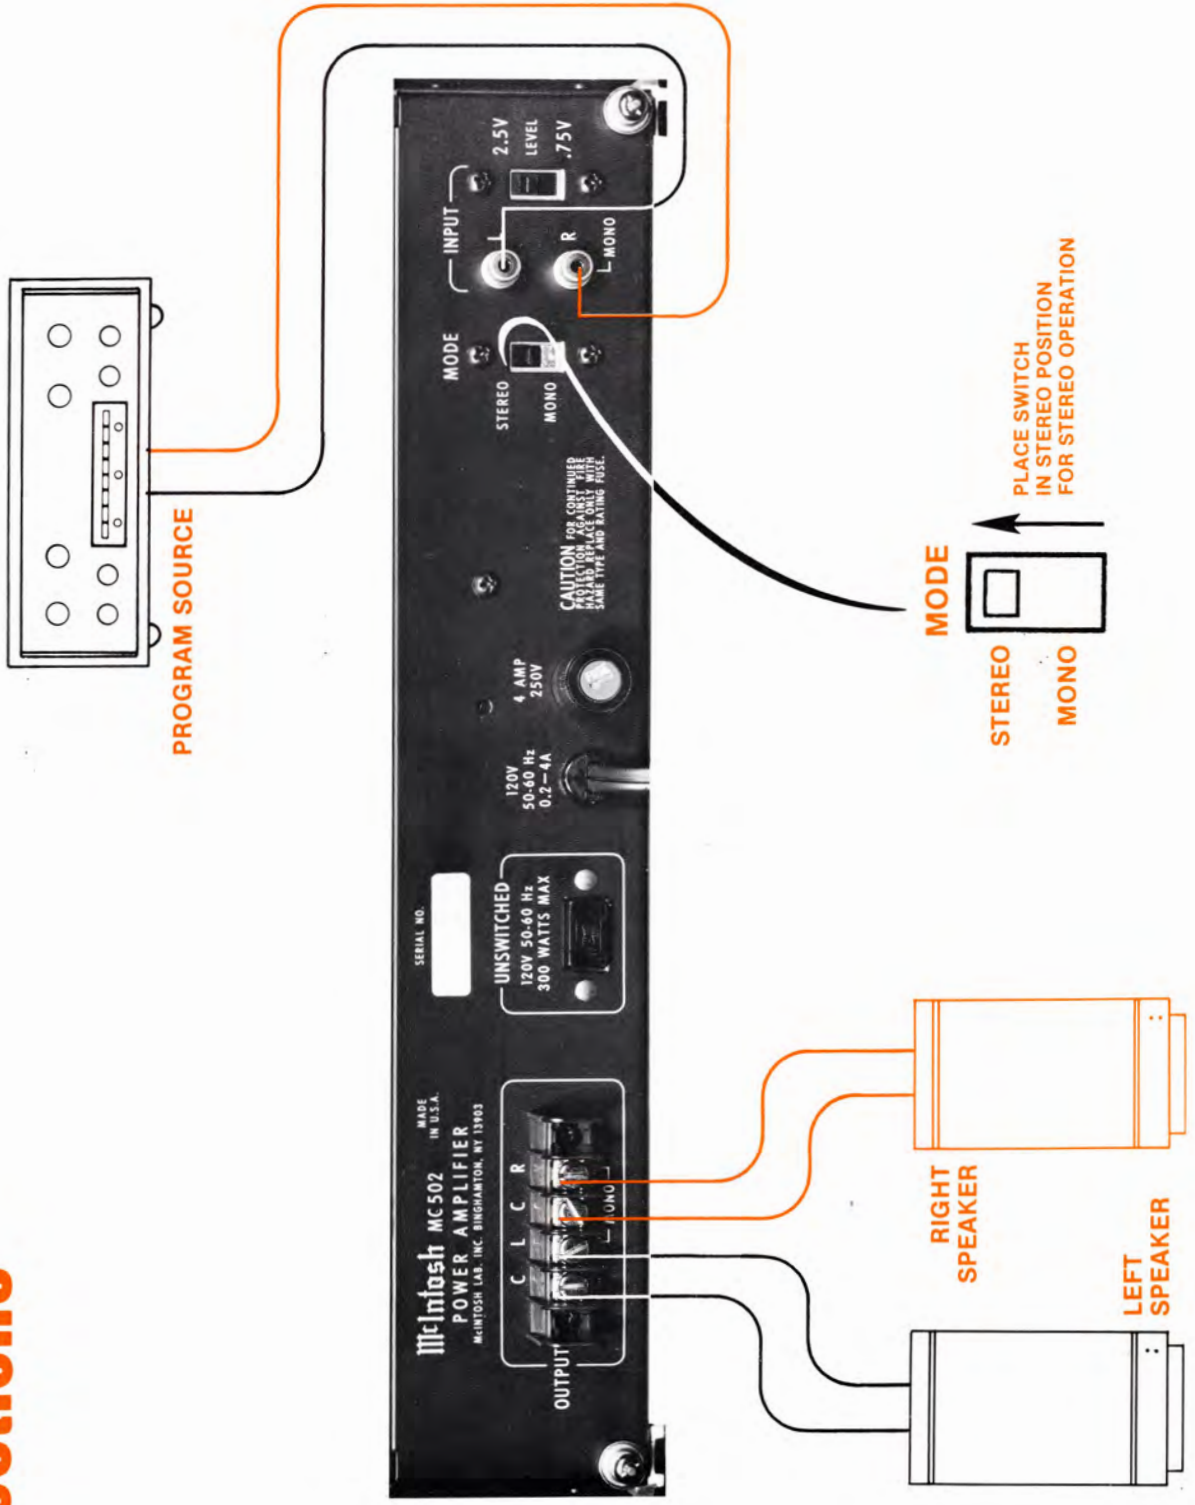

Monophonic Connections

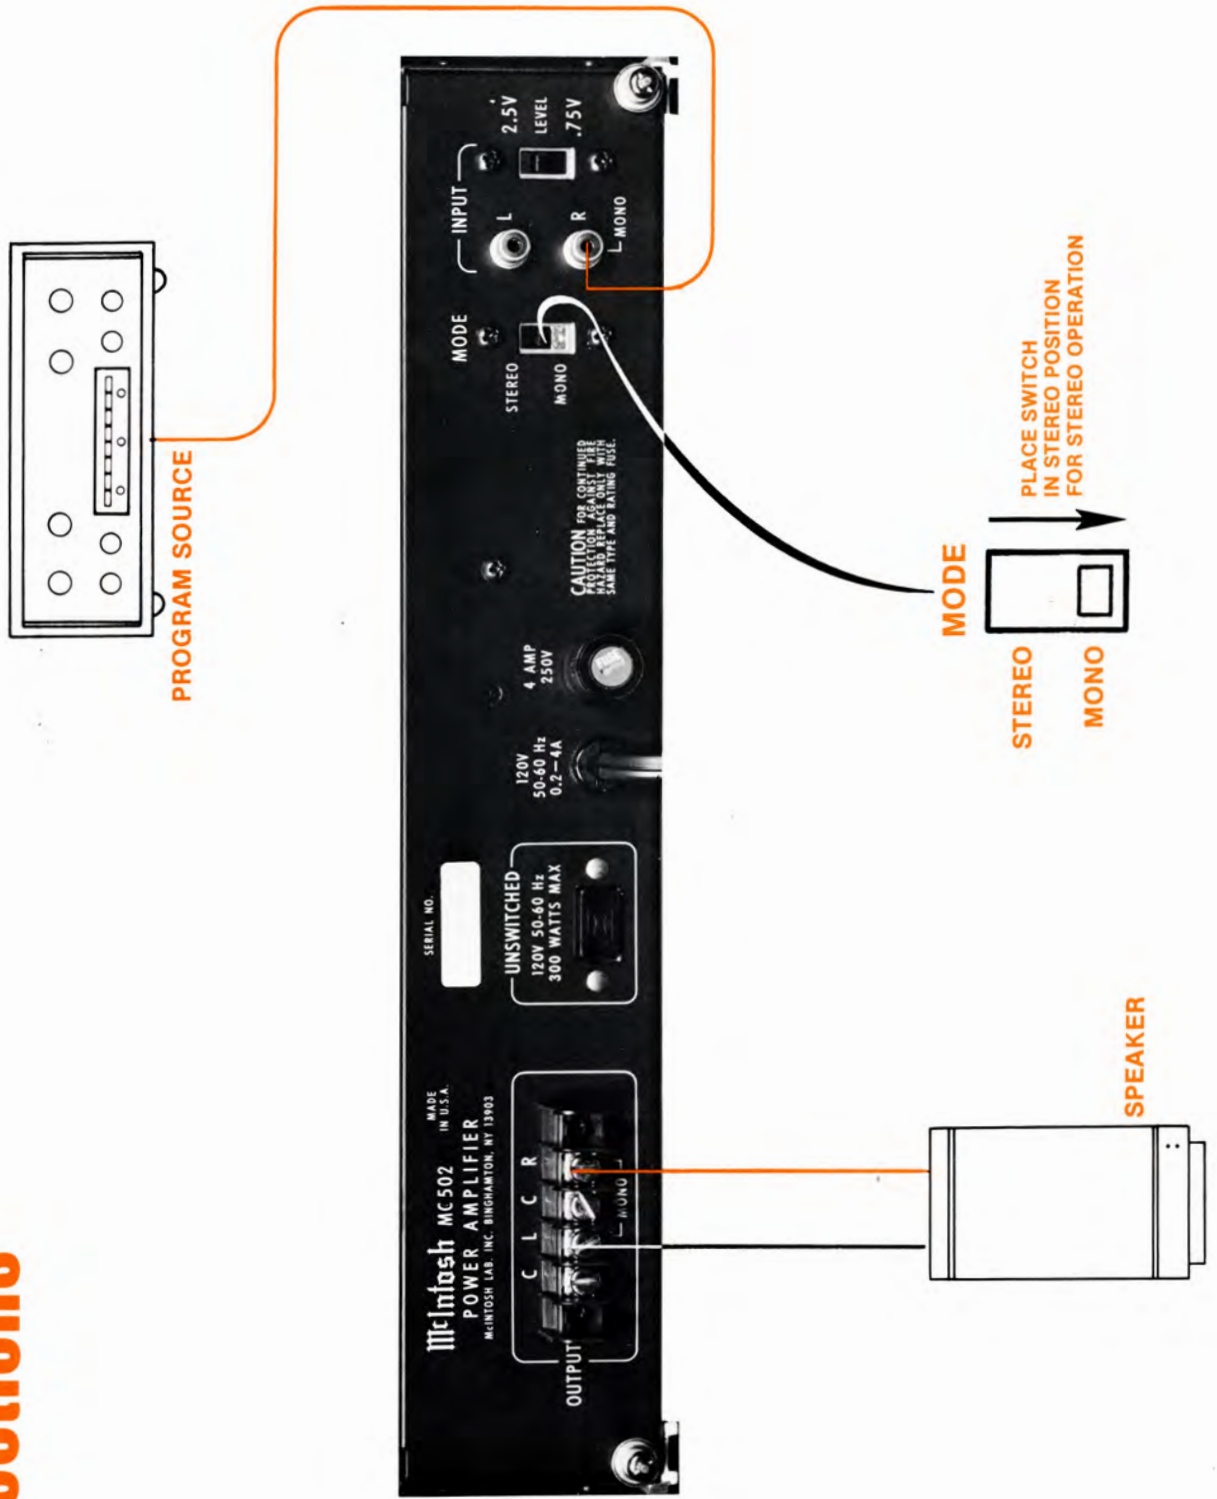

Front Panel Controls and How to Use Them

LEFT GAIN

Use the left gain control to adjust the volume in the left channel to the desired listening level. Turn the control clockwise to increase the volume.

RIGHT/MONO GAIN

Use the right/mono gain control to adjust the volume in the right channel to the desired listening level. Turn the control clockwise to increase the volume. When the MC 502 is connected for mono-phonic operation and the rear panel Mode Switch in Mono the volume is controlled by the Right/Mono Gain control only.

HEADPHONES

The output of the front panel HEADPHONE jack has been designed to feed low impedance dynamic stereo headphones. Plug dynamic headphones into the front panel HEADPHONE jack. Adjust the front panel LEFT GAIN and RIGHT/MONO GAIN control for comfortable headphone listening. Electrostatic headphones generally require higher power than dynamic headphones. Connect them to the LEFT and RIGHT OUTPUT contacts on the back of the MC 502.

SPEAKERS

OFF: The loudspeakers are turned off when the SPEAKER switch is in the OFF position. You can listen to headphones in private.

ON: Music will be heard through the loudspeakers. Use this as the normal listening position.

THE SPEAKER SWITCH MUST BE IN THE "ON" POSITION TO HEAR MUSIC FROM THE LOUDSPEAKERS.

POWER

The power switch turns the MC 502 ON or OFF. The switch does not control the power outlet on the back panel. If you wish to control the AC power from a preamplifier control center leave the switch in the ON position. Be sure the AC cord of the MC 502 is plugged into the controlled outlets on the rear of the preamplifier control center.

OFF: In the OFF position the AC power to the amplifier is turned off.

POWER GUARD INDICATOR LAMPS

POWER GUARD assures that the power amplifier section of the MC 502 can not be over driven, thus amplifier output clipping is eliminated. Clipping is caused when the amplifier is asked to produce more power output than it can deliver with low distortion. Amplifiers are capable of delivering large quantities of power when they are driven to clipping and can have more than 40% harmonic distortion. The extra energy content of the clipped signal will damage most speakers. A McIntosh advancement helps to protect your speaker from this kind of damage. The MC 502 has a built in "waveform comparator" that compares the wave shape of the output signal to the input signal. If the non-linearity between the two signals exceeds 0.5% the POWER GUARD circuit operates. Operation is indicated when the red **LIMIT** indicators turn on. As long as the amplifier operates without overload the **NORMAL** indicator illuminates.



Rear Panel Information

LEFT and RIGHT OUTPUT

For stereo operation, output connections for impedances of 2.7 to 8 ohms are provided on a secure, screw type barrier strip. For monophonic operation proper interconnection provides 8 ohms from the same barrier strip.

MODE SWITCH

The MC 502 can be used for stereo or mono (single channel) operation. The MODE switch is used to select the method of operation desired.

INPUT

In the stereo mode of operation both input jacks accept signal. In the mono mode of operation only the Right (MONO) channel input jack accepts signal and the Left channel input jack is disconnected.

INPUT LEVEL

The input sensitivity of the MC 502 is 0.75 volts or 2.5 V depending on the position of the INPUT LEVEL switch. With indicated voltage applied and the GAIN control clockwise, the amplifier will deliver its rated power. All McIntosh preamplifiers have been designed to deliver 2.5 volts output with rated input. For the best signal to noise ratio when using McIntosh source equipment, place the INPUT LEVEL switch in the 2.5 V position and the front panel LEFT and RIGHT/MONO GAIN controls in the fully clockwise position. If more gain is desired the 0.75 V position may be used. For source equipment other than McIntosh set the switch in the position nearest to the stated output rating of the source equipment.

AC POWER

The MC 502 is rated for 120 volts, 50/60 hertz. It uses 0.2 amperes (20watts) when there is no signal output and up to 4 amperes (400 watts) with both channels delivering rated power. A 4 ampere fuse protects the MC 502 electrically. The AC power outlet provided for auxiliary equipment is neither fused nor switched.



Performance Limits

We promise you that the MC 502 you buy must be capable of performance at or exceeding these limits at the time of purchase or you get your money back. McIntosh PERFORMANCE LIMITS are the maximum departure from perfection permitted for a McIntosh instrument.

PERFORMANCE

McIntosh audio power ratings are in accordance with the Federal Trade Commission Regulation of November 4, 1974 concerning power output claims for amplifiers used in home entertainment products.

POWER OUTPUT

STEREO:

75 watts into 2.7 to 4 ohm loads, 50 watts into 8 ohms loads, minimum sine wave continuous average power output per channel from 20 Hz to 20,000 Hz, both channels operating.

Which is: 14.2 volts RMS across 2.7 ohms
17.3 volts RMS across 4 ohms
20.0 volts RMS across 8 ohms

MONO (Bridged):

150 watts into an 8 ohm load, minimum sine wave continuous average power output from 20 Hz to 20,000 Hz.

Which is: 34.6 volts RMS across 8 ohms.

OUTPUT LOAD IMPEDANCE

Stereo: 2.7 ohms to 8 ohms.

Mono: 8 ohms obtained by connecting across the output terminals of both channels.

RATED POWER BAND

20 Hz to 20 kHz

TOTAL HARMONIC DISTORTION

STEREO:

.02% maximum harmonic distortion at any power level from 250 milliwatts to rated power per channel from 20Hz to 20,000 Hz, both channels operating.

MONO:

.02% maximum harmonic distortion at any power level from 250 milliwatts to rated power from 20 Hz to 20,000 Hz.

INTERMODULATION DISTORTION

STEREO:

.02% maximum per channel with both channels operating for any combination of frequencies, 20 Hz to 20,000 Hz.

MONO:

.02% maximum at any power level from 250 milliwatts to rated power for any combination of frequencies, 20 Hz to 20,000 Hz.

FREQUENCY RESPONSE (at one watt output)

20 Hz to 20,000 Hz +0, -0.25 dB
10 Hz to 100,000 Hz +0, -3.0 dB

HUM AND NOISE

95 dB below rated output

RATINGS

OUTPUT VOLTAGES:

25 volts for distribution lines

DAMPING FACTOR

Greater than 50

INPUT IMPEDANCE

75,000 ohms

INPUT SENSITIVITY

Switchable: 0.75 volt or 2.5 volts-Level control provided for higher input voltages.

POWER REQUIREMENT

120 Volts, 50/60 Hz, 0.2 to 4 amperes (20 to 400 watts).




MECHANICAL INFORMATION





SIZE: Front Panel measures 16 inches wide (40.6 cm) by 3 5/8 inches high (9.2 cm). Chassis measures 14 3/4 inches wide (37.5 cm) by 2 3/8 inches high (6.0 cm) by 14 1/2 inches deep (36.8 cm), including connectors. Knob clearance required is 1 1/4 inches (3.2 cm) in front of the mounting panel.

FINISH: Front panel is anodized gold and black with special gold/teal nomenclature illumination. Chassis is black.

WEIGHT: 27 pounds (12.2 kg) net. 38 pounds (17.2 kg) in shipping carton

Performance Charts

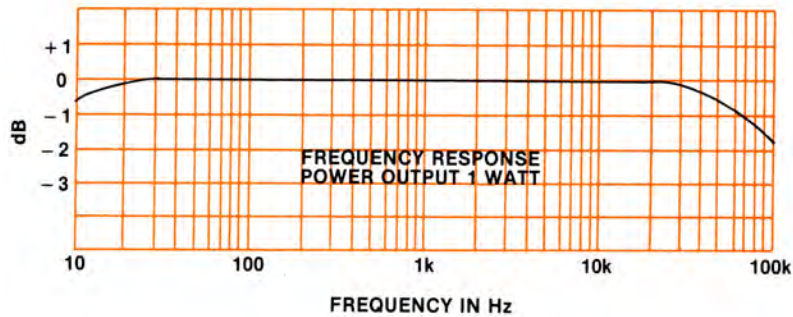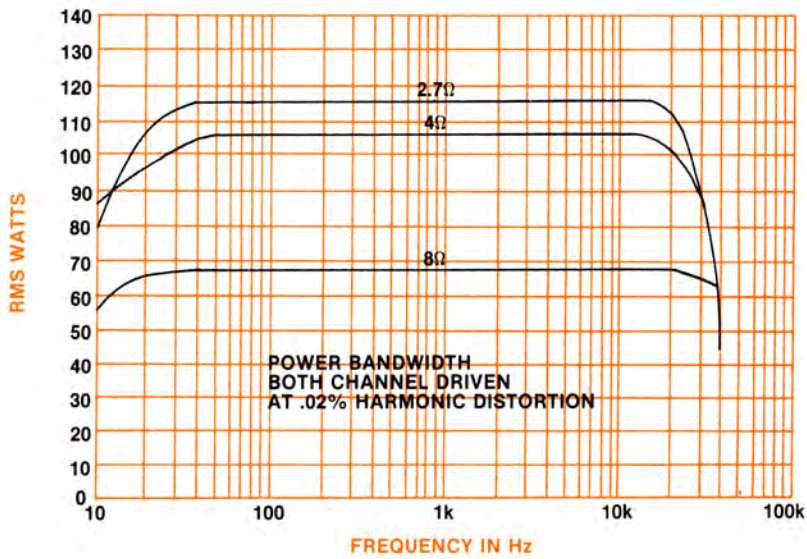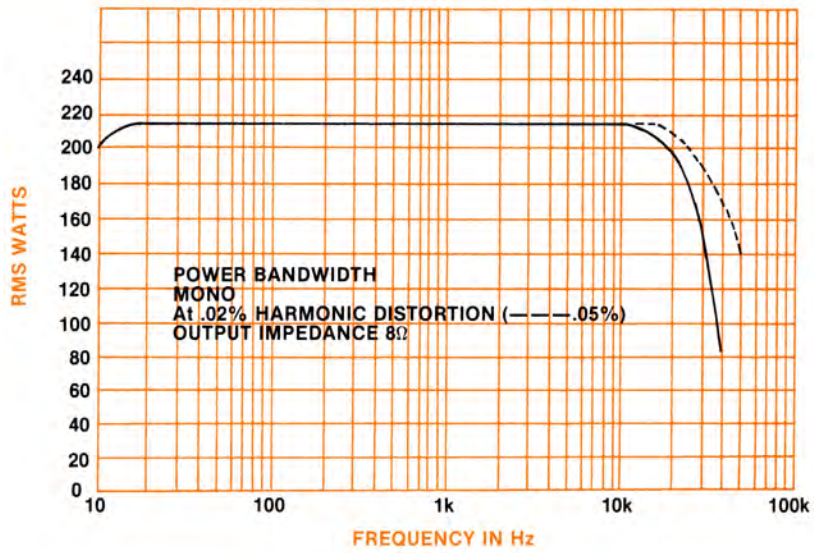

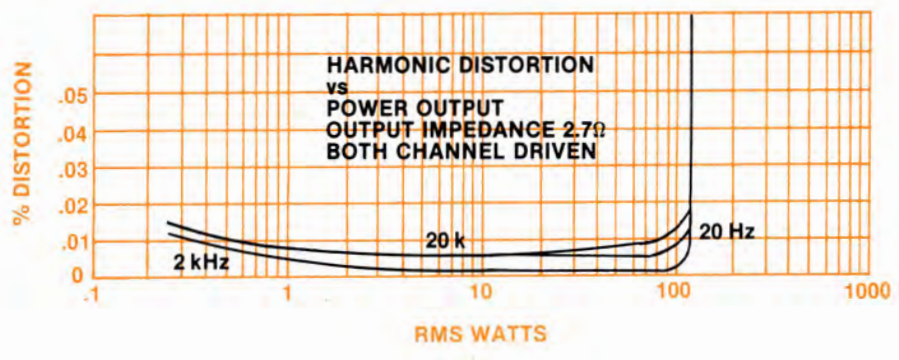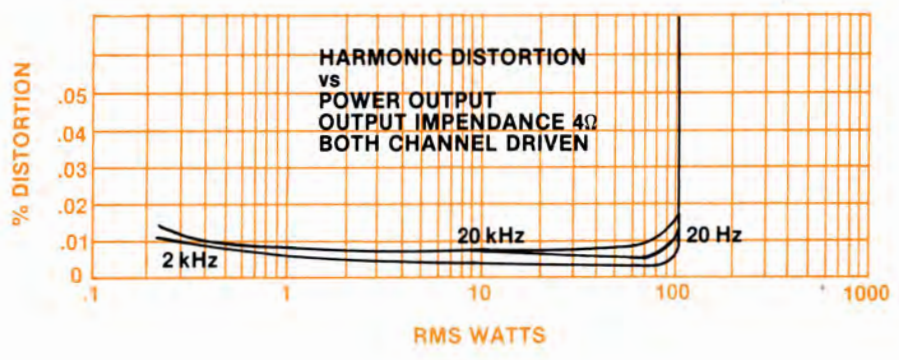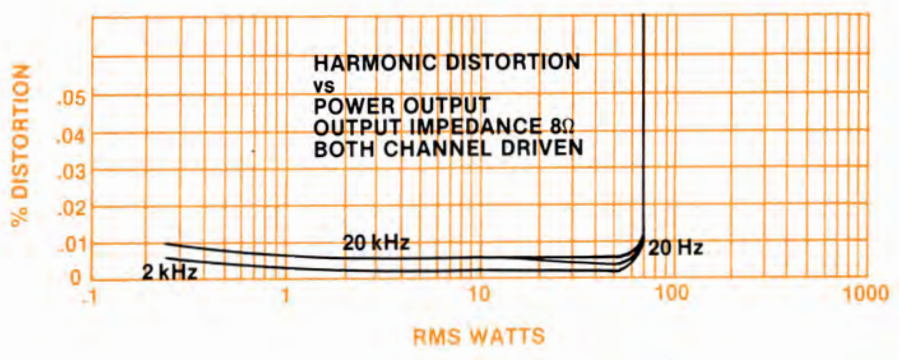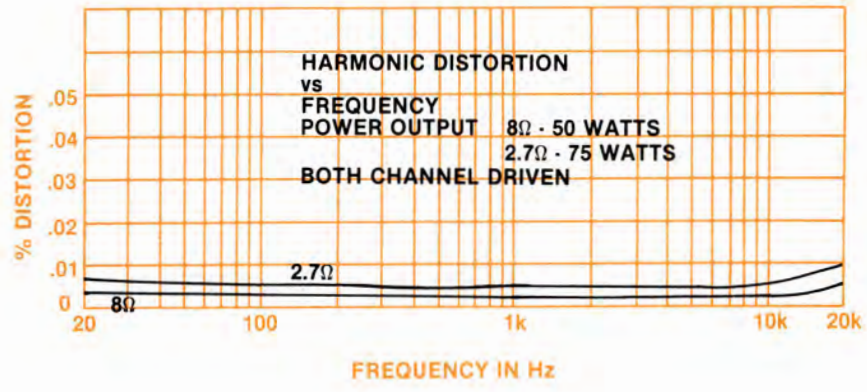

Technical Description

While the MC 502 performs a rather elementary function as a basic stereo power amplifier, it does contain an number of rather sophisticated circuits. Each channel consists of an input preamplifier, a power amplifier section, three separate protecting control circuits, and a phase inverter which is integral with the left channel. The power supply includes positive and negative electronic regulators. A description of each circuit follows:

Preamplifiers

Each channel's preamplifier is a high performance low noise operational amplifier arranged for a stage gain of 4.5 times. The input signals to the MC 502 first pass through the input level switch attenuator, then to the left or right/mono gain controls, next to electronic attenuators which are part of the Power Guard circuit to be described later and then to the preamplifiers. The left channel input path also includes the mode switch which, in stereo, connects to the normal stereo signal path or, if switched to mono, directs the output from the right channel preamplifier to the inverting input of the left channel preamplifier. This mono arrangement drives the following power amplifier stages in phase opposition so that mono output power is derived as the sum of the left and right power channels.

Power amplifier sections

Each of the identical power amplifier sections consist of 4 stages of amplification. At the input is a differential transistor pair optimised for low noise. Input and feedback signals are applied to this differential amplifier. The two outputs of the differential amplifier are combined in a current mirror and the resulting signal drives the second stage, a class A voltage amplifier. The second stage output feeds complementary emitter followers which in turn drive the output transistors which are also complementary emitter followers. Biasing for the driver and output transistors is accomplished in the base circuit of the driver transistors using a temperature sensitive transistor thermally coupled to the output transistor heat sinks. Cool efficient operation is thereby obtained.

Protection control circuits

Three control circuits are used. The first control circuit is the Sentry Monitor which senses the current flow in the output stage transistors. The sense characteristic is shaped to confine current and voltage conditions to the safe operating characteristics of the output stage power tran-

sistors. This protection greatly contributes to the reliable, long life, performance of the MC 502.

Power Guard is the second control circuit. Amplifiers are capable of delivering large quantities of power when they are driven to clipping. Clipping is caused when the amplifier is asked to produce more power output than it can deliver with low distortion. A clipped amplifier can have more than 40% harmonic distortion. The extra energy content of the clipped signal will damage most loudspeakers, particularly delicate high frequency tweeters. A new McIntosh advancement helps protect your speakers from this kind of damage. The MC 502 has a built-in waveform comparator which compares the wave shape of the output signal to the input signal. If the disparity between the two signals exceeds 0.5% (equivalent to 0.5% total harmonic distortion) a red limit indicator illuminates. With any further increase in distortion the Power Guard circuit will operate. This circuit limits the input dynamically so that the amplifier cannot be overdriven. Power Guard eliminates amplifier output clipping.

Power Guard does not limit the dynamic range or the power output of the power amplifier. Clipping occurs when an amplifier is asked to exceed its design limits and the capacity of the power supply. Since Power Guard does not begin to work until this point is reached, the power capability of the amplifier is never affected.

The third control circuit is the speaker protection and turn on delay arrangement. In most direct coupled circuits a failure of any transistor in the power amplifier will cause a DC potential to appear in the output. To assure that no damaging or interfering DC appears across the output terminals, a special very fast acting protector circuit constantly monitors the output for DC. If, at any time, a constant DC level appears, the speakers are disconnected. The protective circuit reacts in milliseconds. Speakers remain disconnected until the cause has been fixed. Integral with this circuit is the transient free turn on and turn off controller. The power amplifier output signals pass through a heavy duty relay before reaching the output terminals. The relay is controlled by an electronic circuit which closes the relay approximately two seconds after the power switch is turned on and releases the relay almost instantly when the power is turned off.


The Sentry Monitor, Power Guard, and speaker protector circuits were developed by McIntosh engineers and are each covered by U.S. patents assigned to McIntosh Laboratory.

Power Supply

Two high current power supplies - a positive 40 volt DC and a negative 40 volt DC - are used to drive the output power amplifier. Two very large filter capacitors, 10,000 microfarads each, are used to store a large amount of energy to provide good filtering and excellent voltage regulation. Good low frequency response and negligible low frequency distortion in the power amplifier stages depends on the regulation of the power supply. Two additional electronically regulated power supplies are used in the MC 502. A + 15 volt and a - 15 volt line supply all operational amplifiers.



Block Diagram

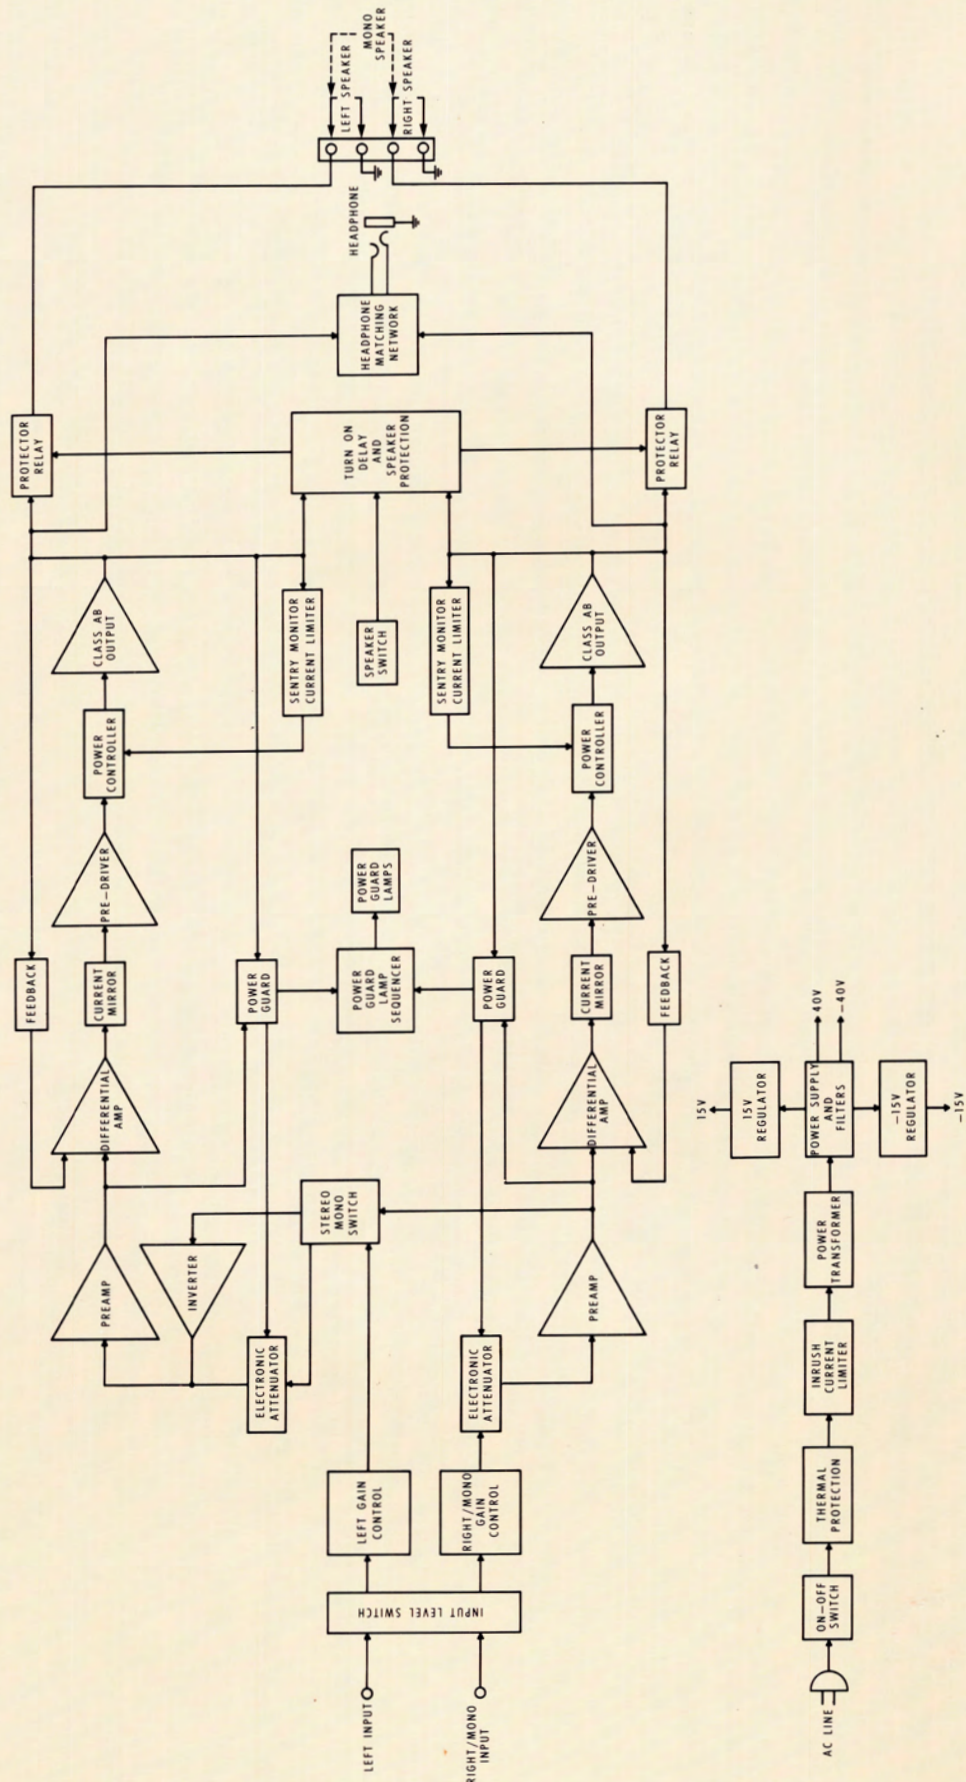

McINTOSH MC 502 STEREO POWER AMPLIFIER

McIntosh®

McINTOSH LABORATORY INC.
2 CHAMBERS ST., BINGHAMTON, N.Y. 13903-2699
607-723-3512

The continuous improvement of its products is the policy of
McIntosh Laboratory Incorporated who reserve the right
to improve design and price without notice.
Printed in U.S.A.
039579